



CarTFT FM with Radiator

Connect your CarTFT FM (Automotive USB FM/RDS Radio) to your PC (USB and 3.55mm to PC's Line-In or Mic-In)

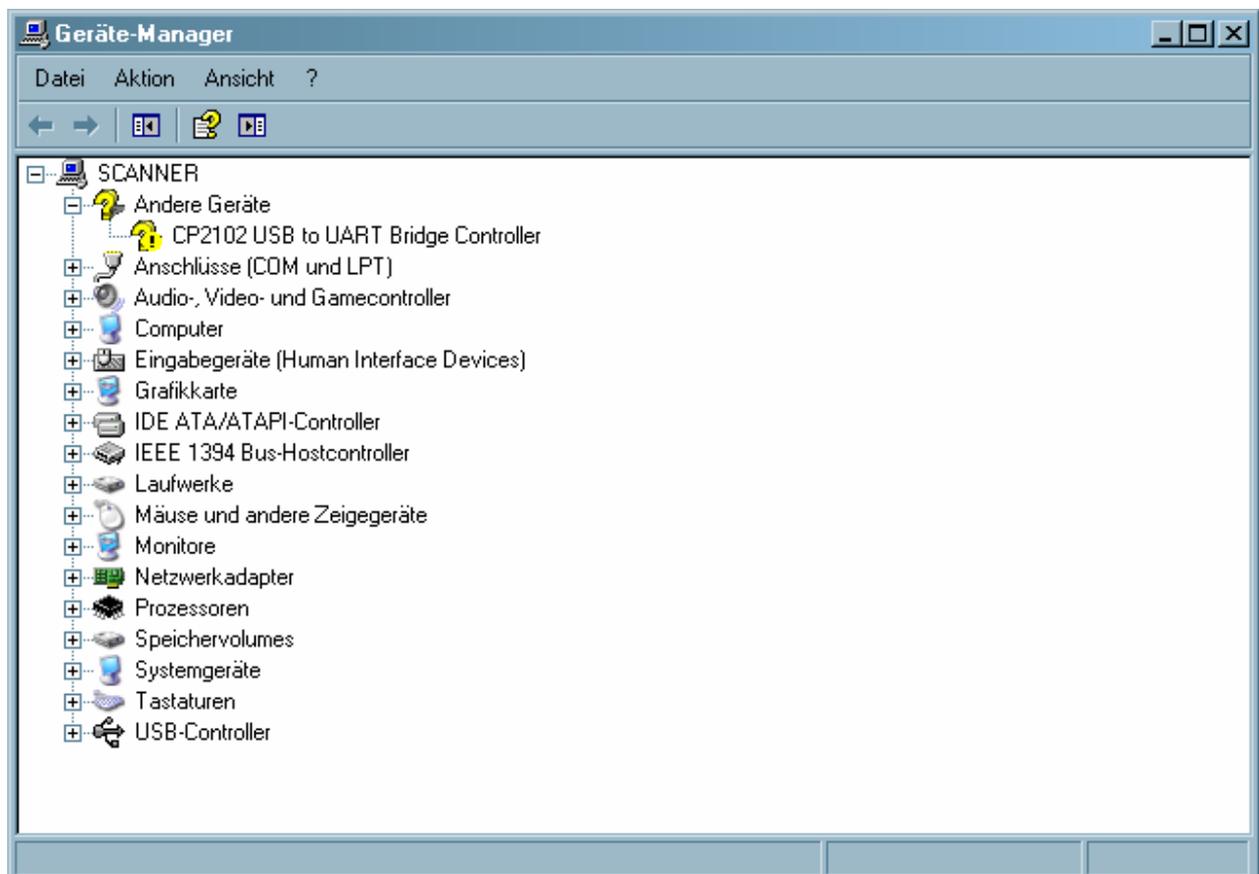


There will be a new device in Windows hardware manager. At this place you later can check if the device is installed correctly.

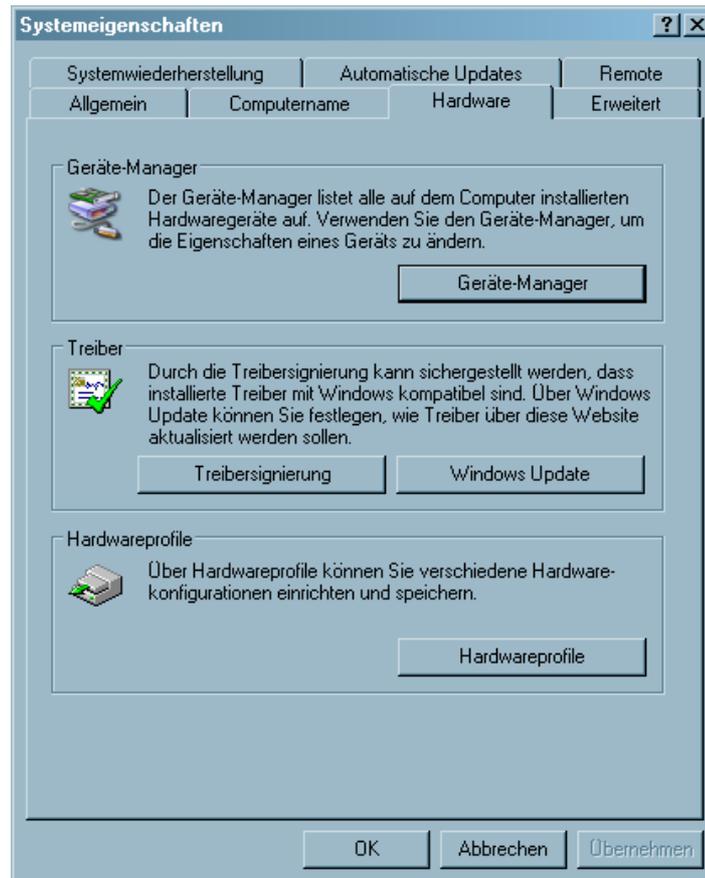





Insert the Driver CD. Go to folder „Driver“ and open it.

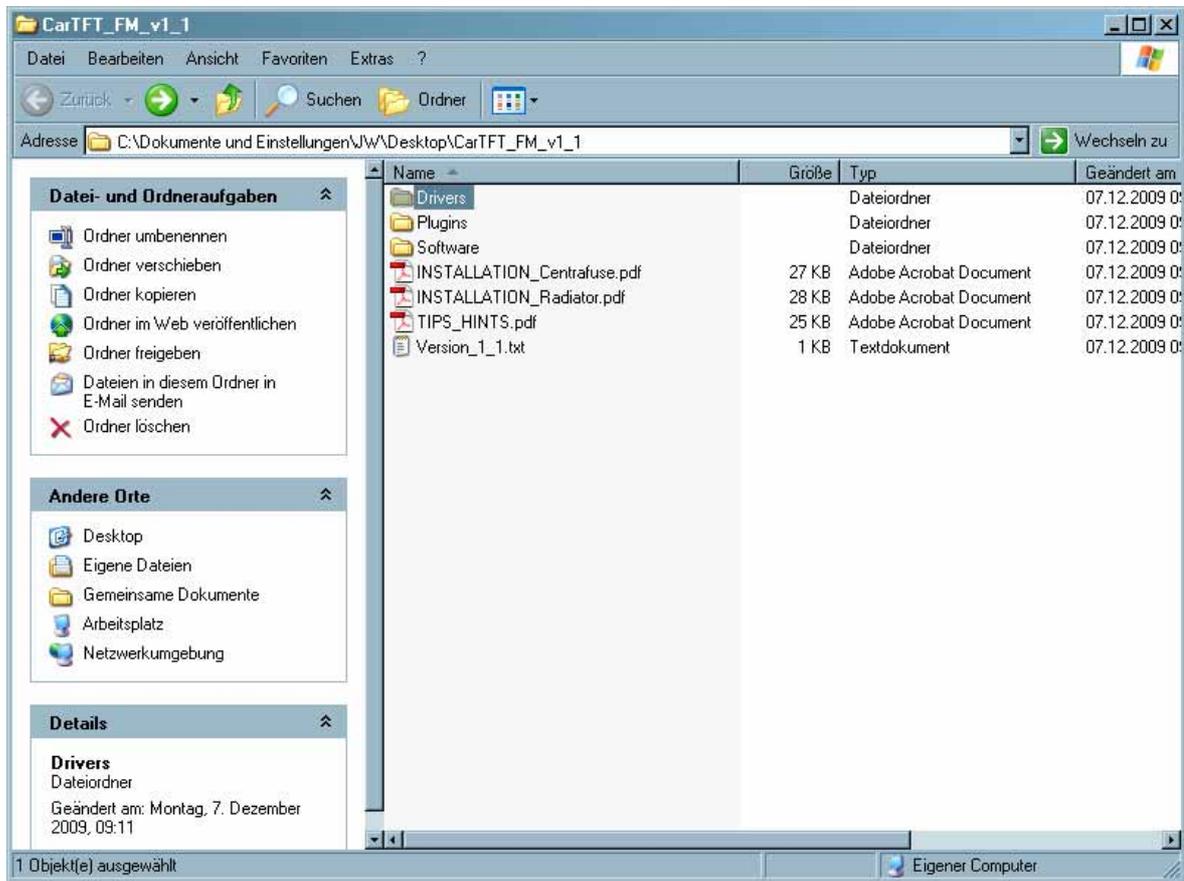


Now open the folder which matches with your operating system.

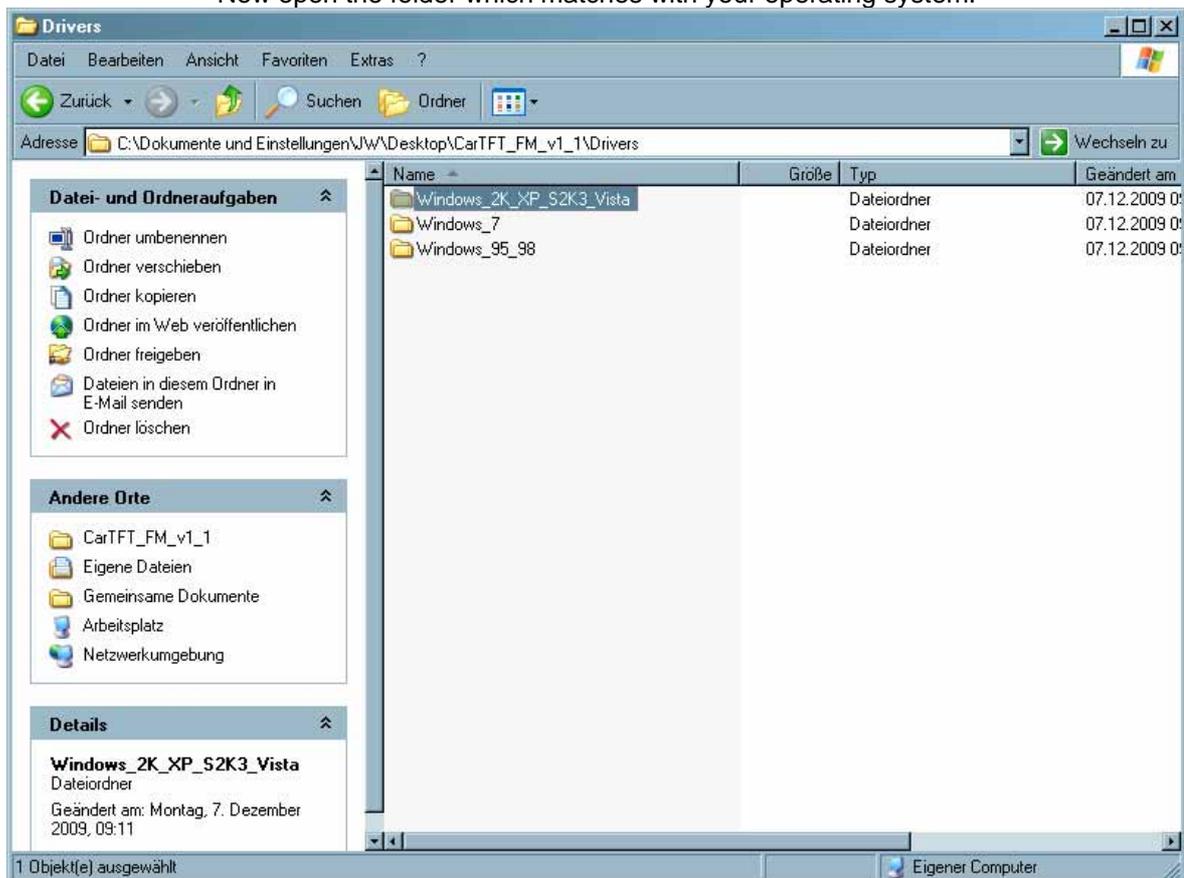


Begin with installation by double-clicking „CarTFT_FM_Driver_Install.exe“

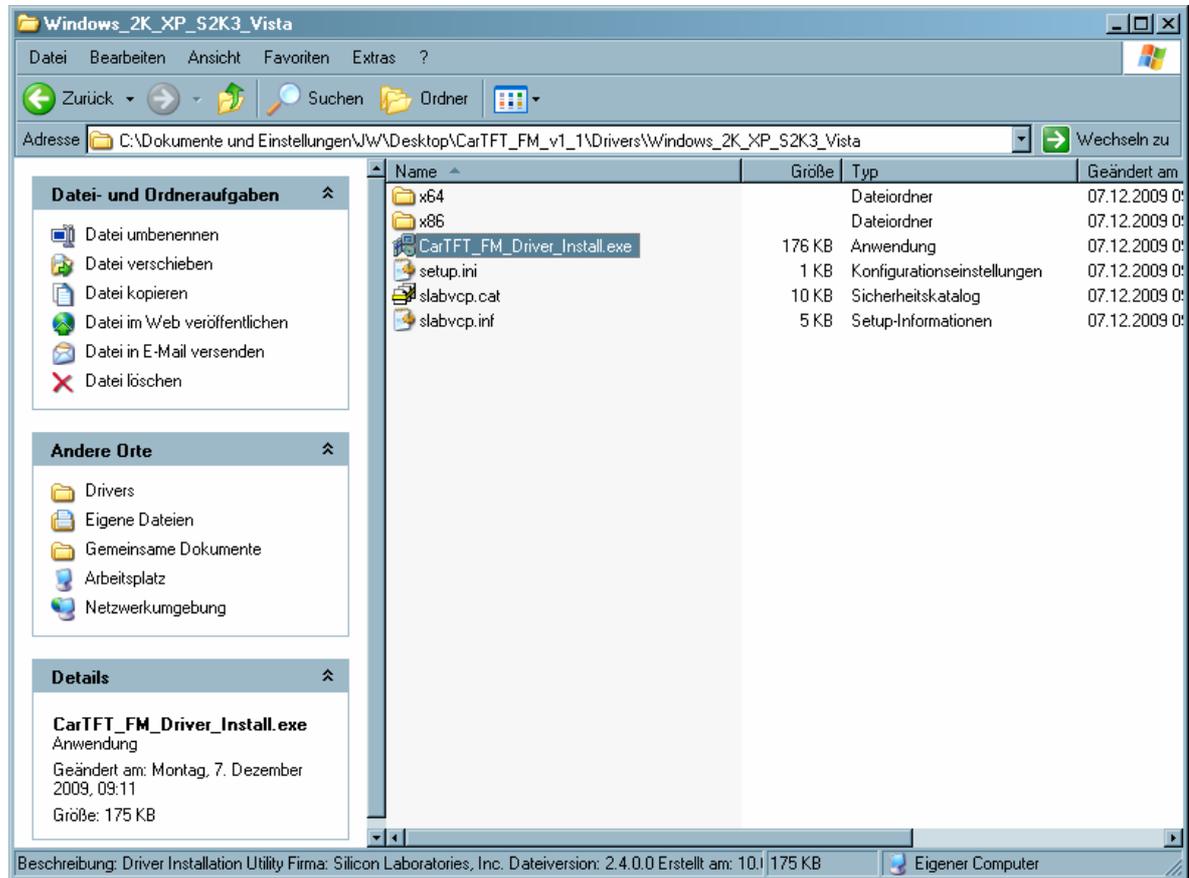


Confirm the security warning.

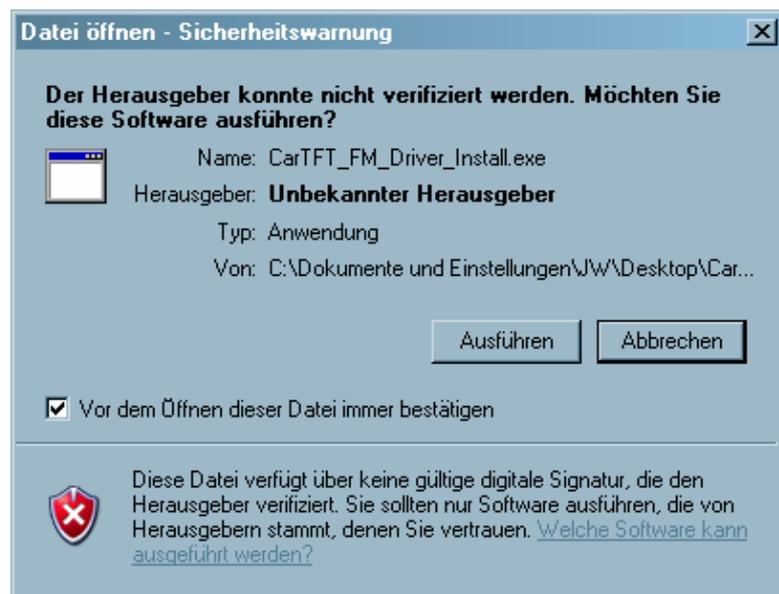


Confirm on Install-Button

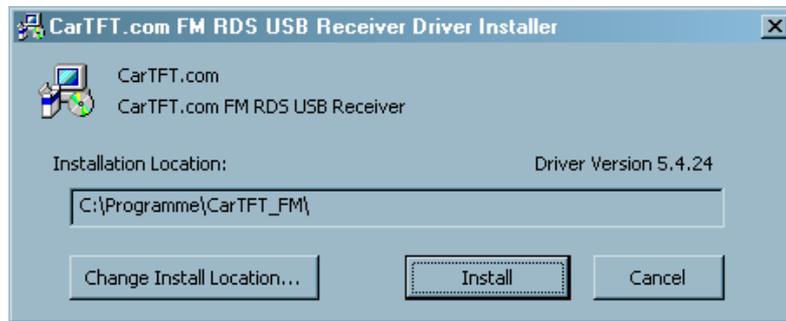


After installation is finished, confirm with „OK“

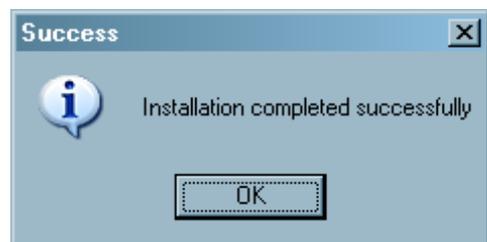


Go to Windows hardware manager and look on which COM port your device is installed on :

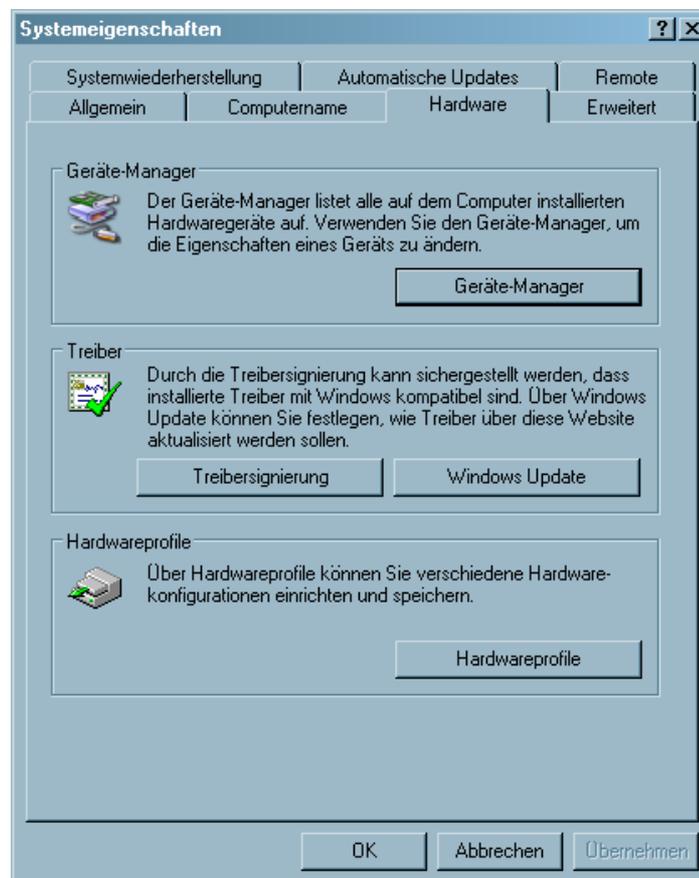


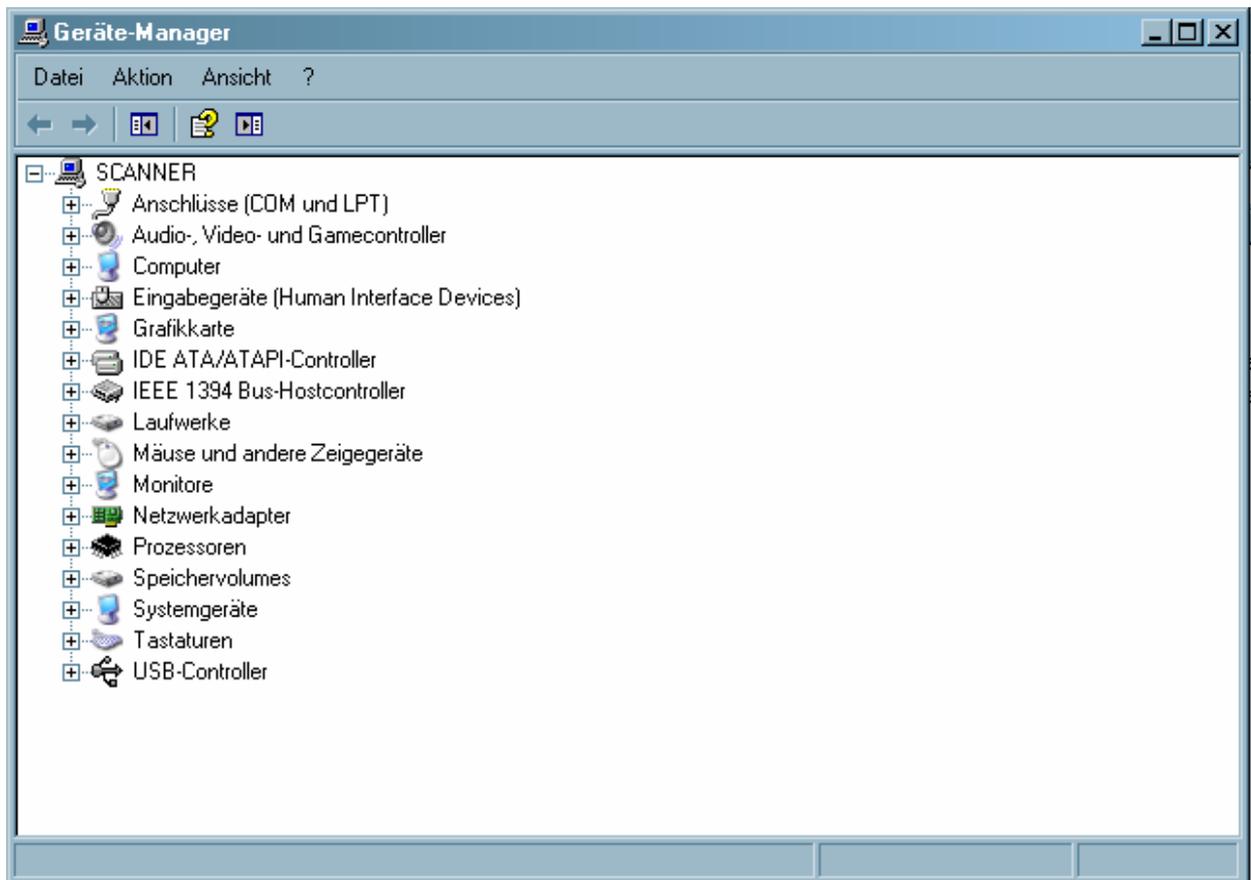


The name of the device is „Silicon Labs CP210x USB to UART Bridge“ and in our example it is installed on COM port 12.

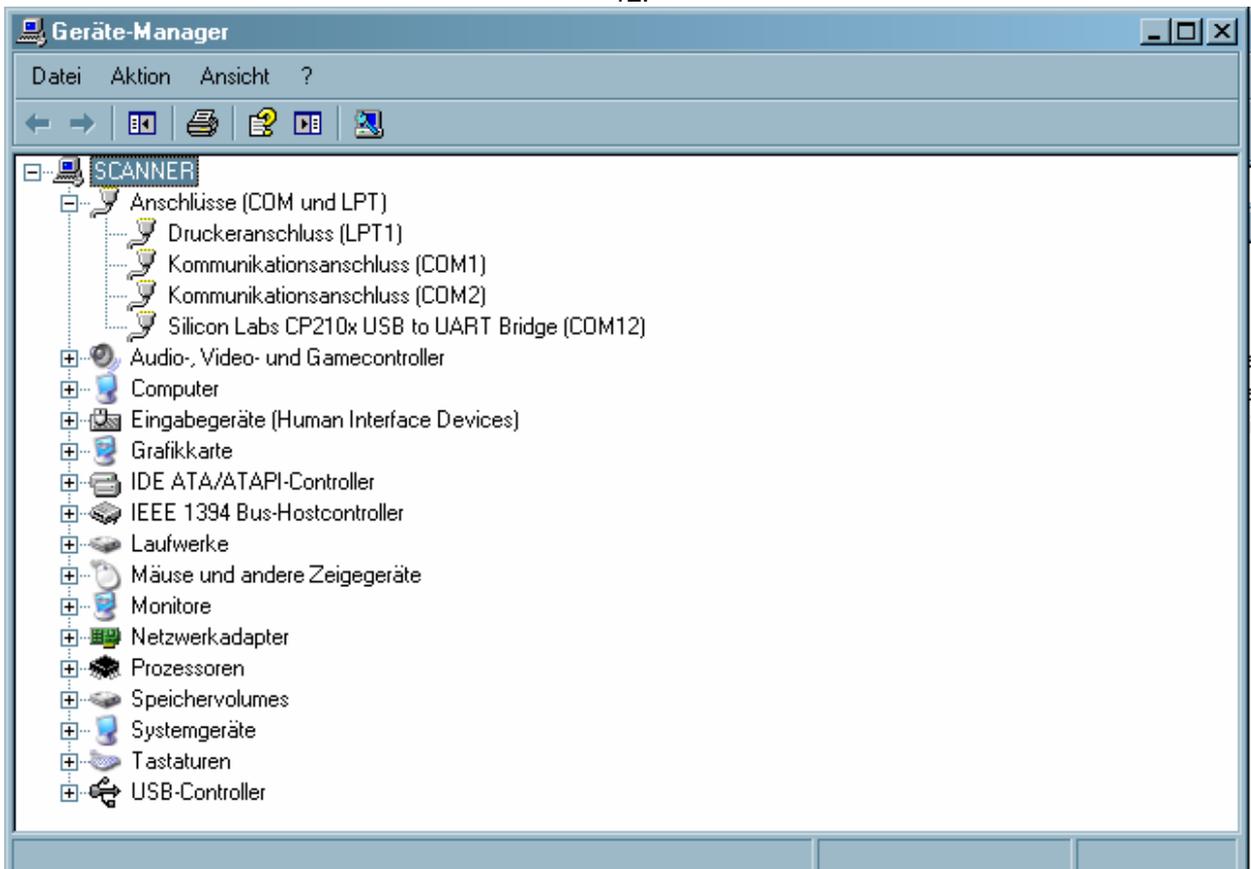

Change to directory „Software“ on the DriverCD and install Radiator by opening the „Radiator_Setup.exe“ file.

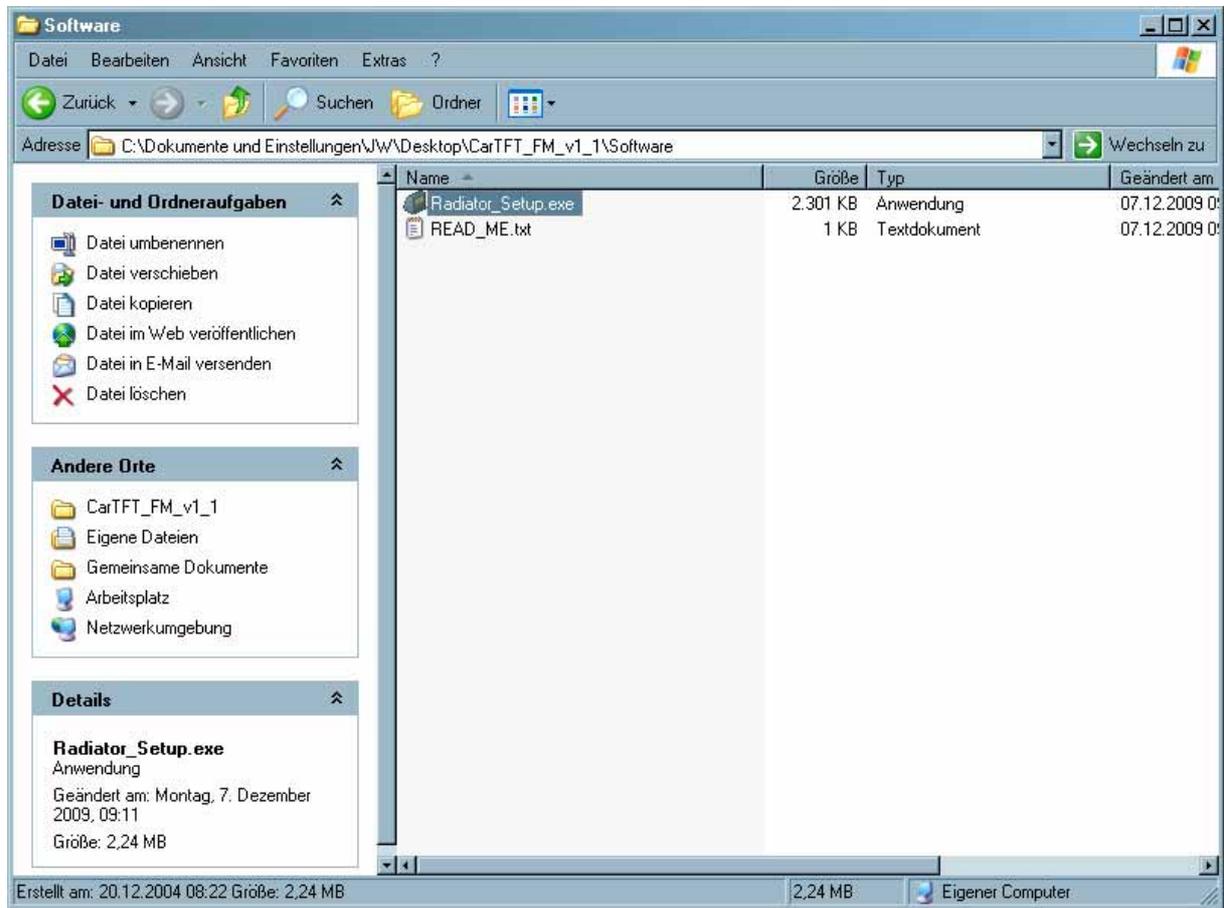


Confirm the security warning with Ok.

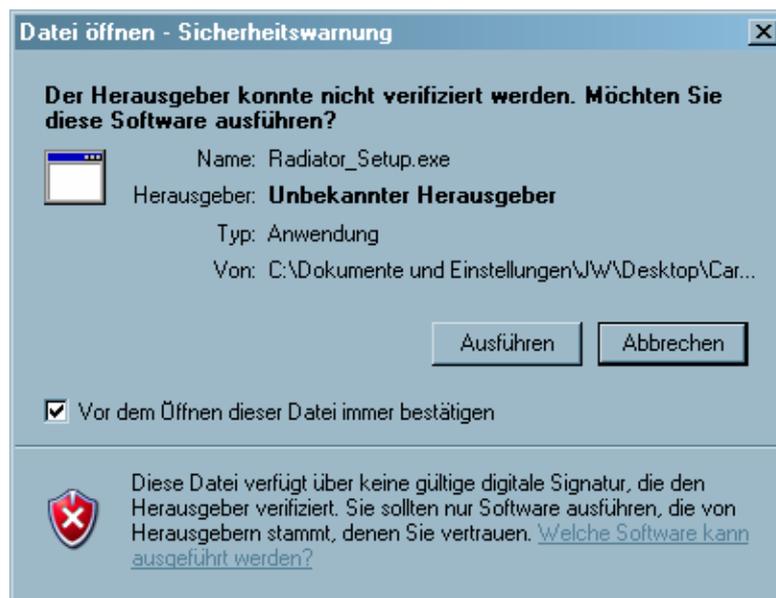



Confirm with „Next“-Buttons until you get to „Install“-Button.


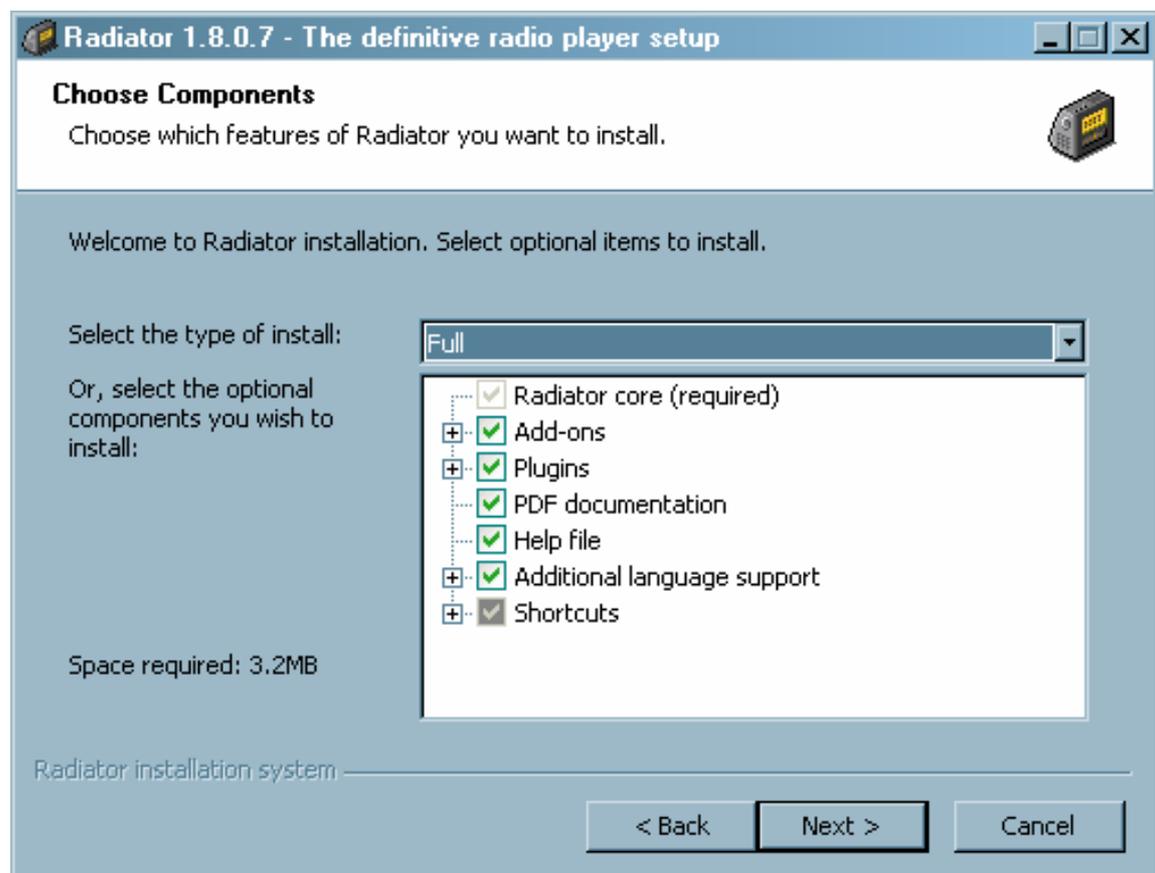




CARTFT.COM

Shop for mobile
PC- and GPS-Solutions

Power Up Your Car

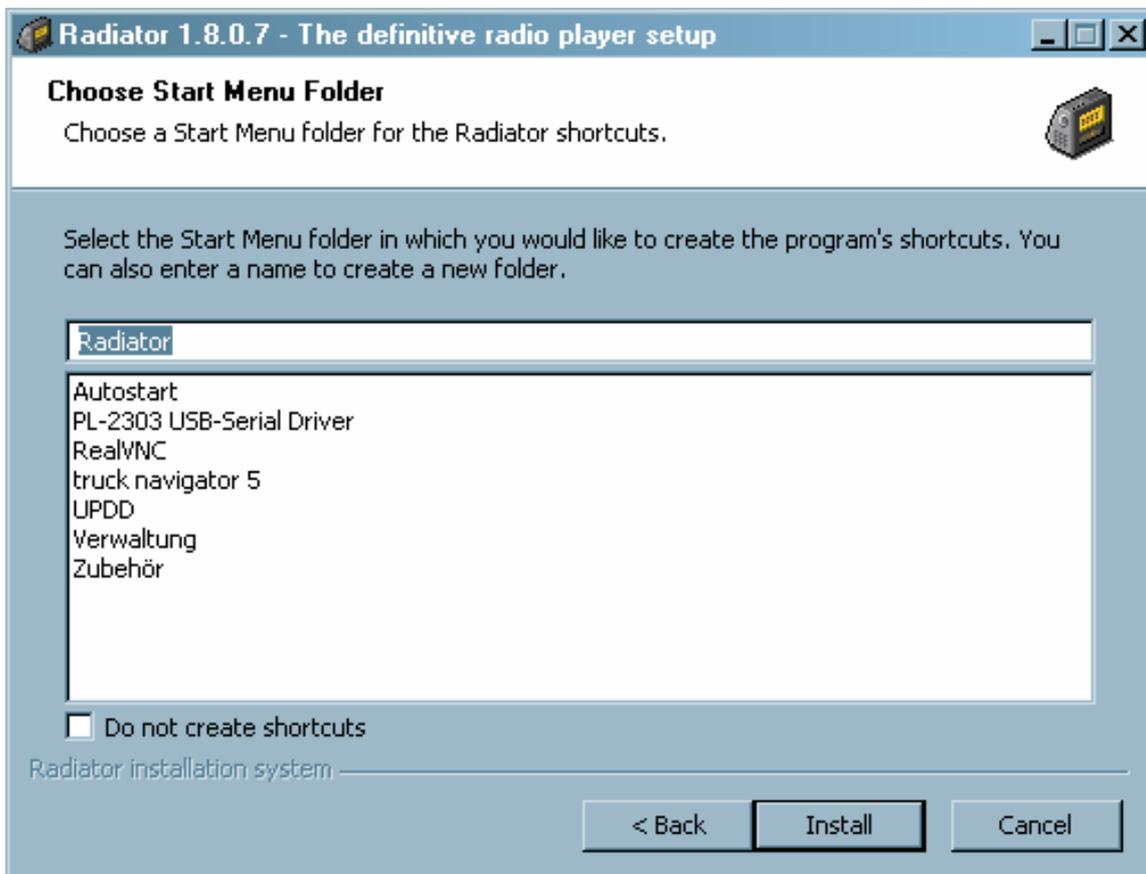
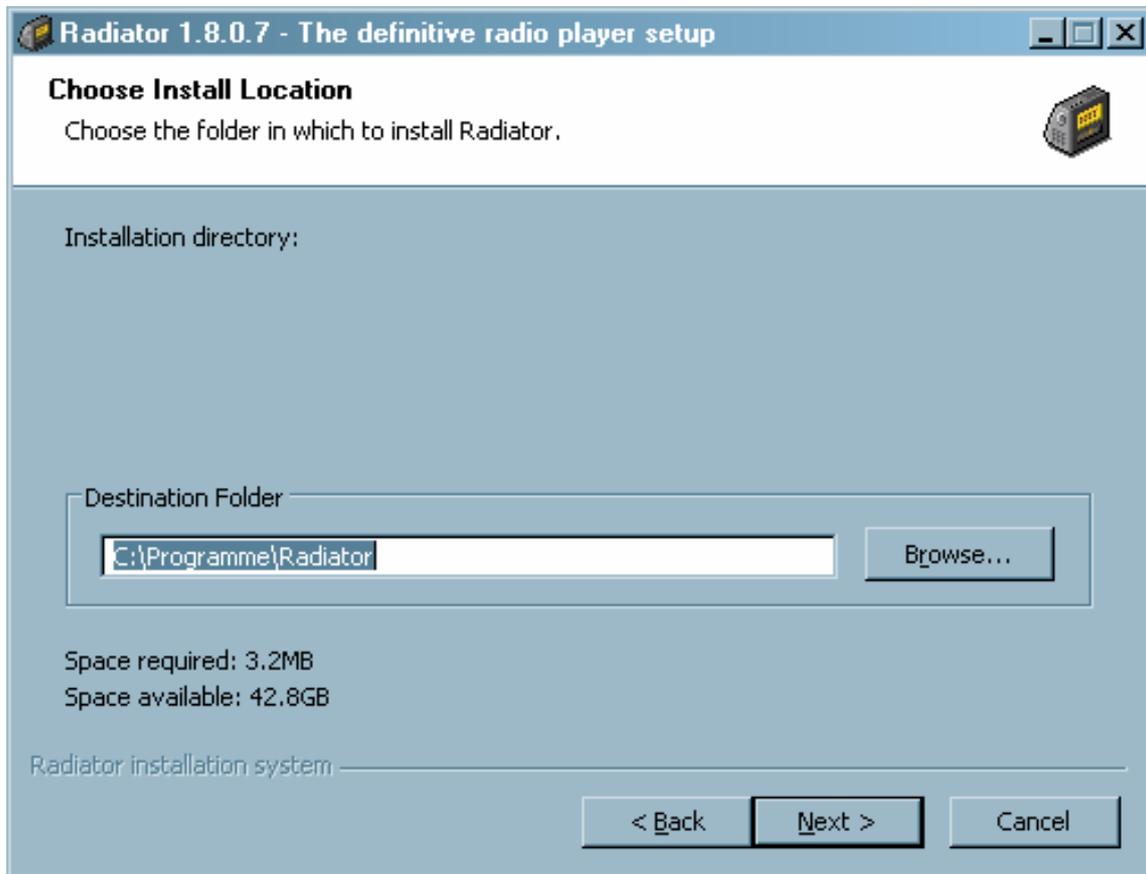




CARTFT.COM

Shop for mobile
PC- and GPS-Solutions

Power Up Your Car

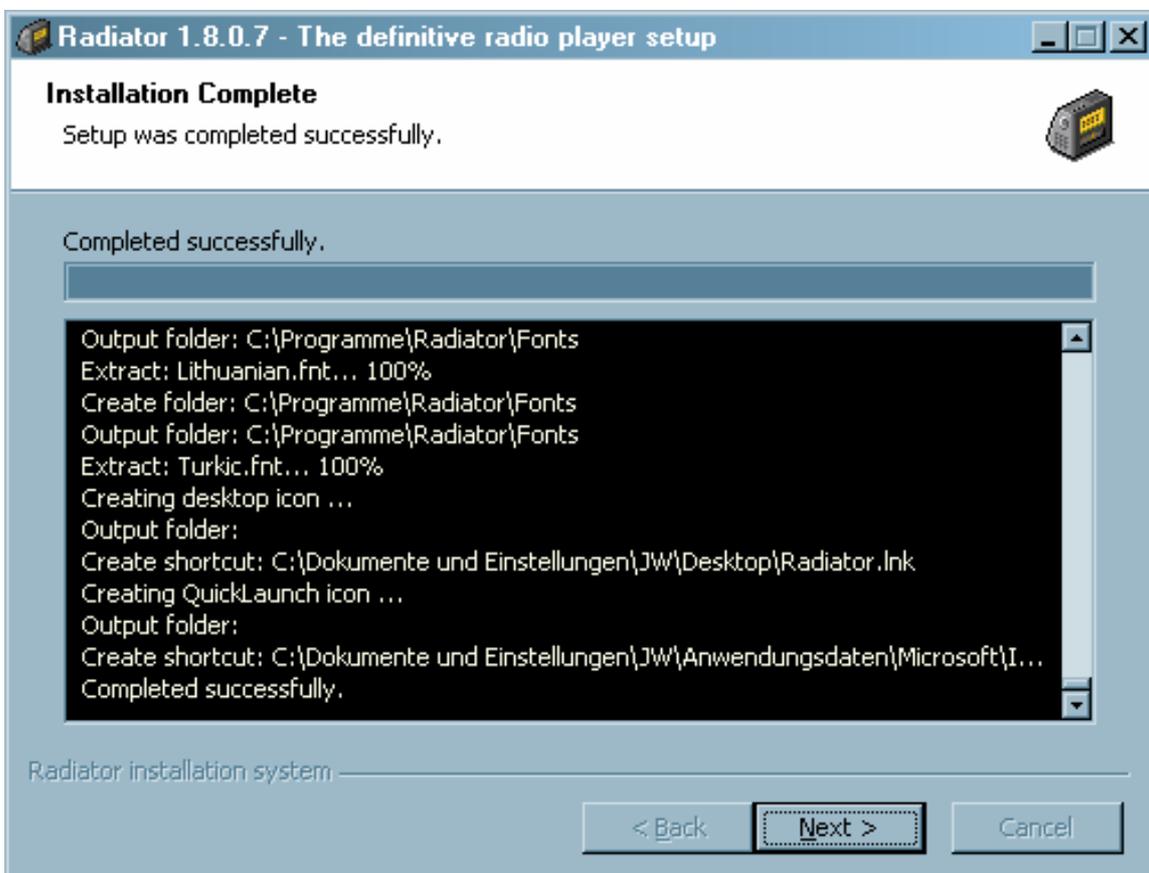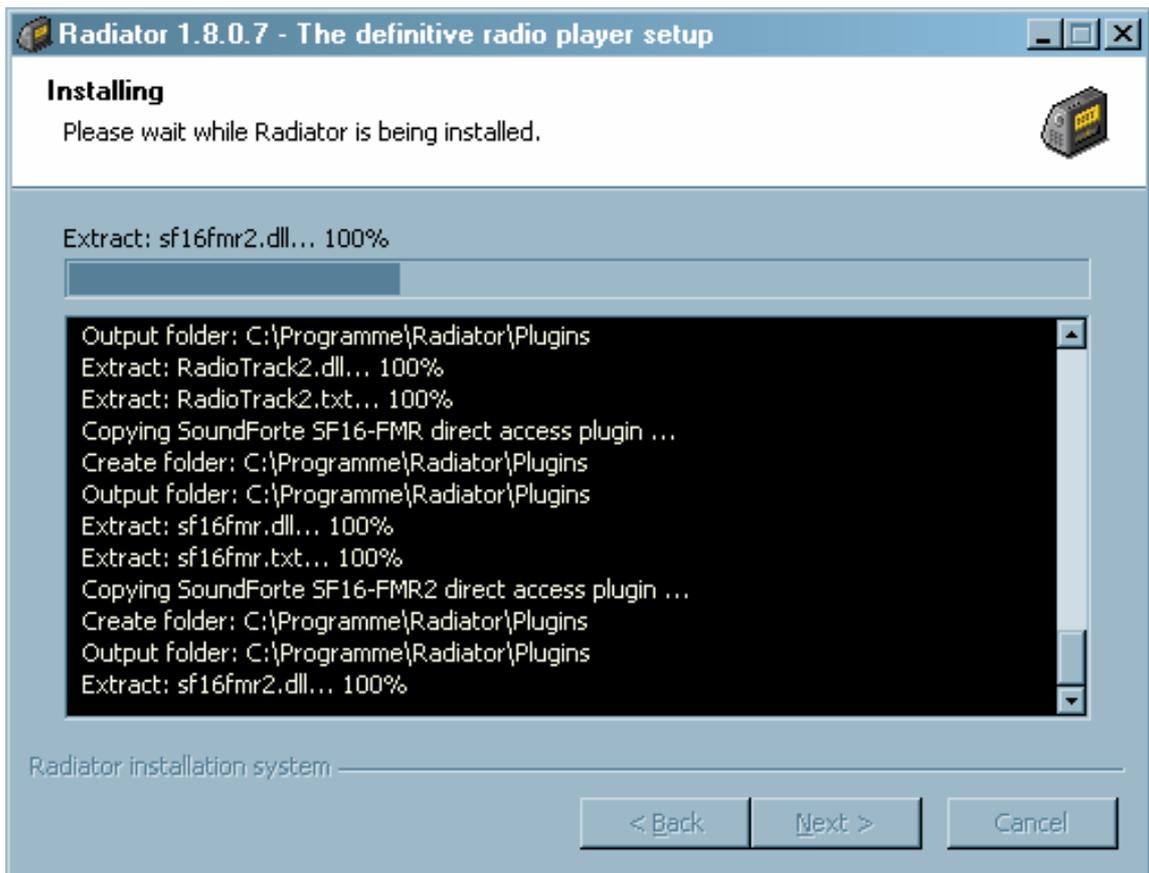



Mit „Finish“ und „OK“ bestätigen



CARTFT.COM

Shop for mobile
PC- and GPS-Solutions


Power Up Your Car

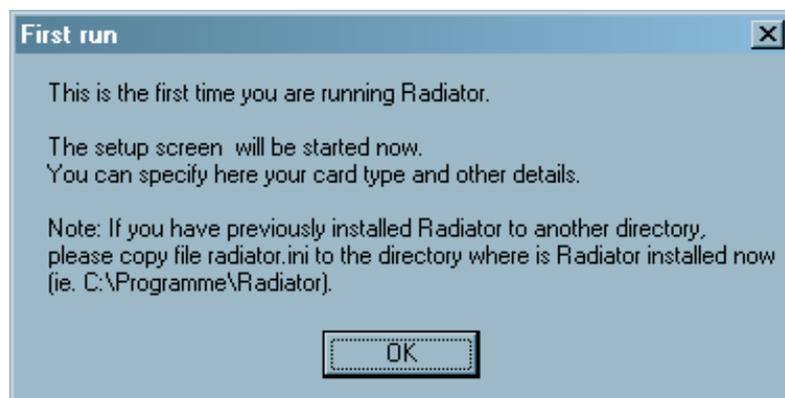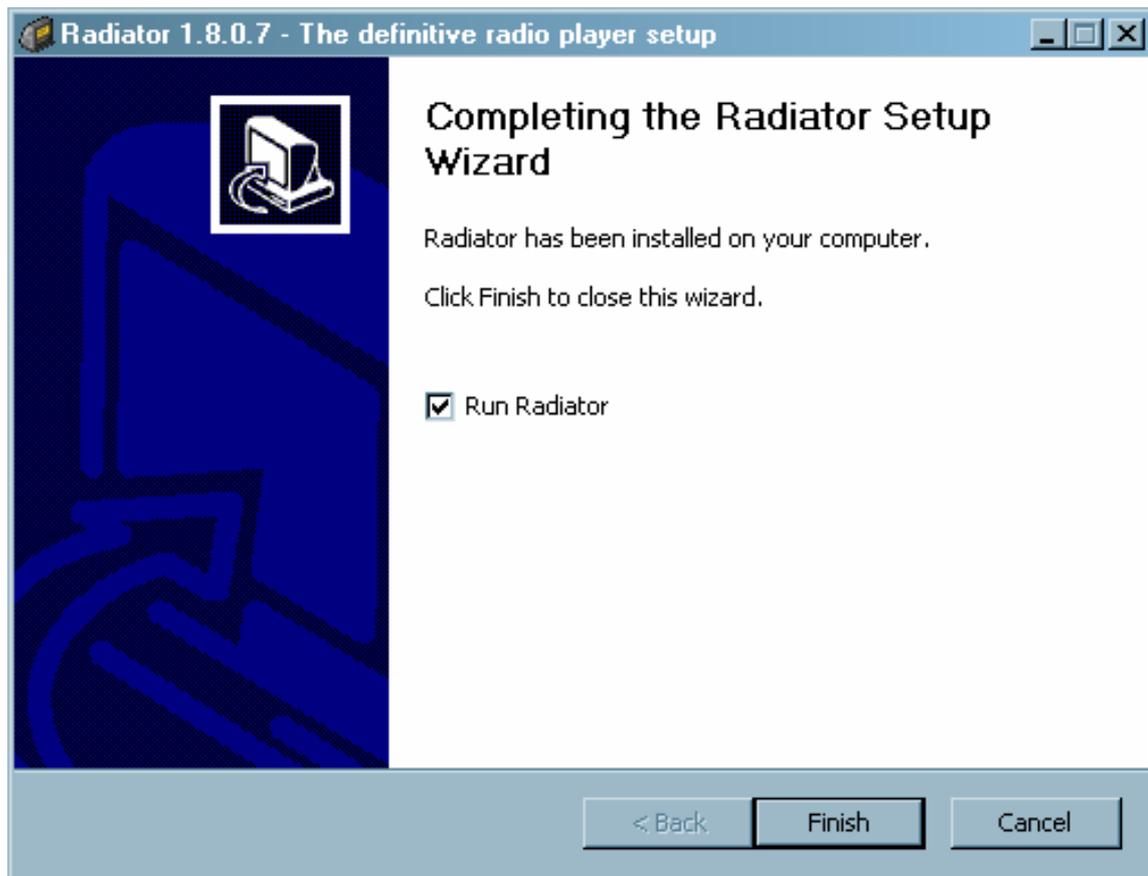

You can close this window. Radiator is now installed.





Change to „Plugins“ directory on DriverCD and open subdirectory „Radiator“.

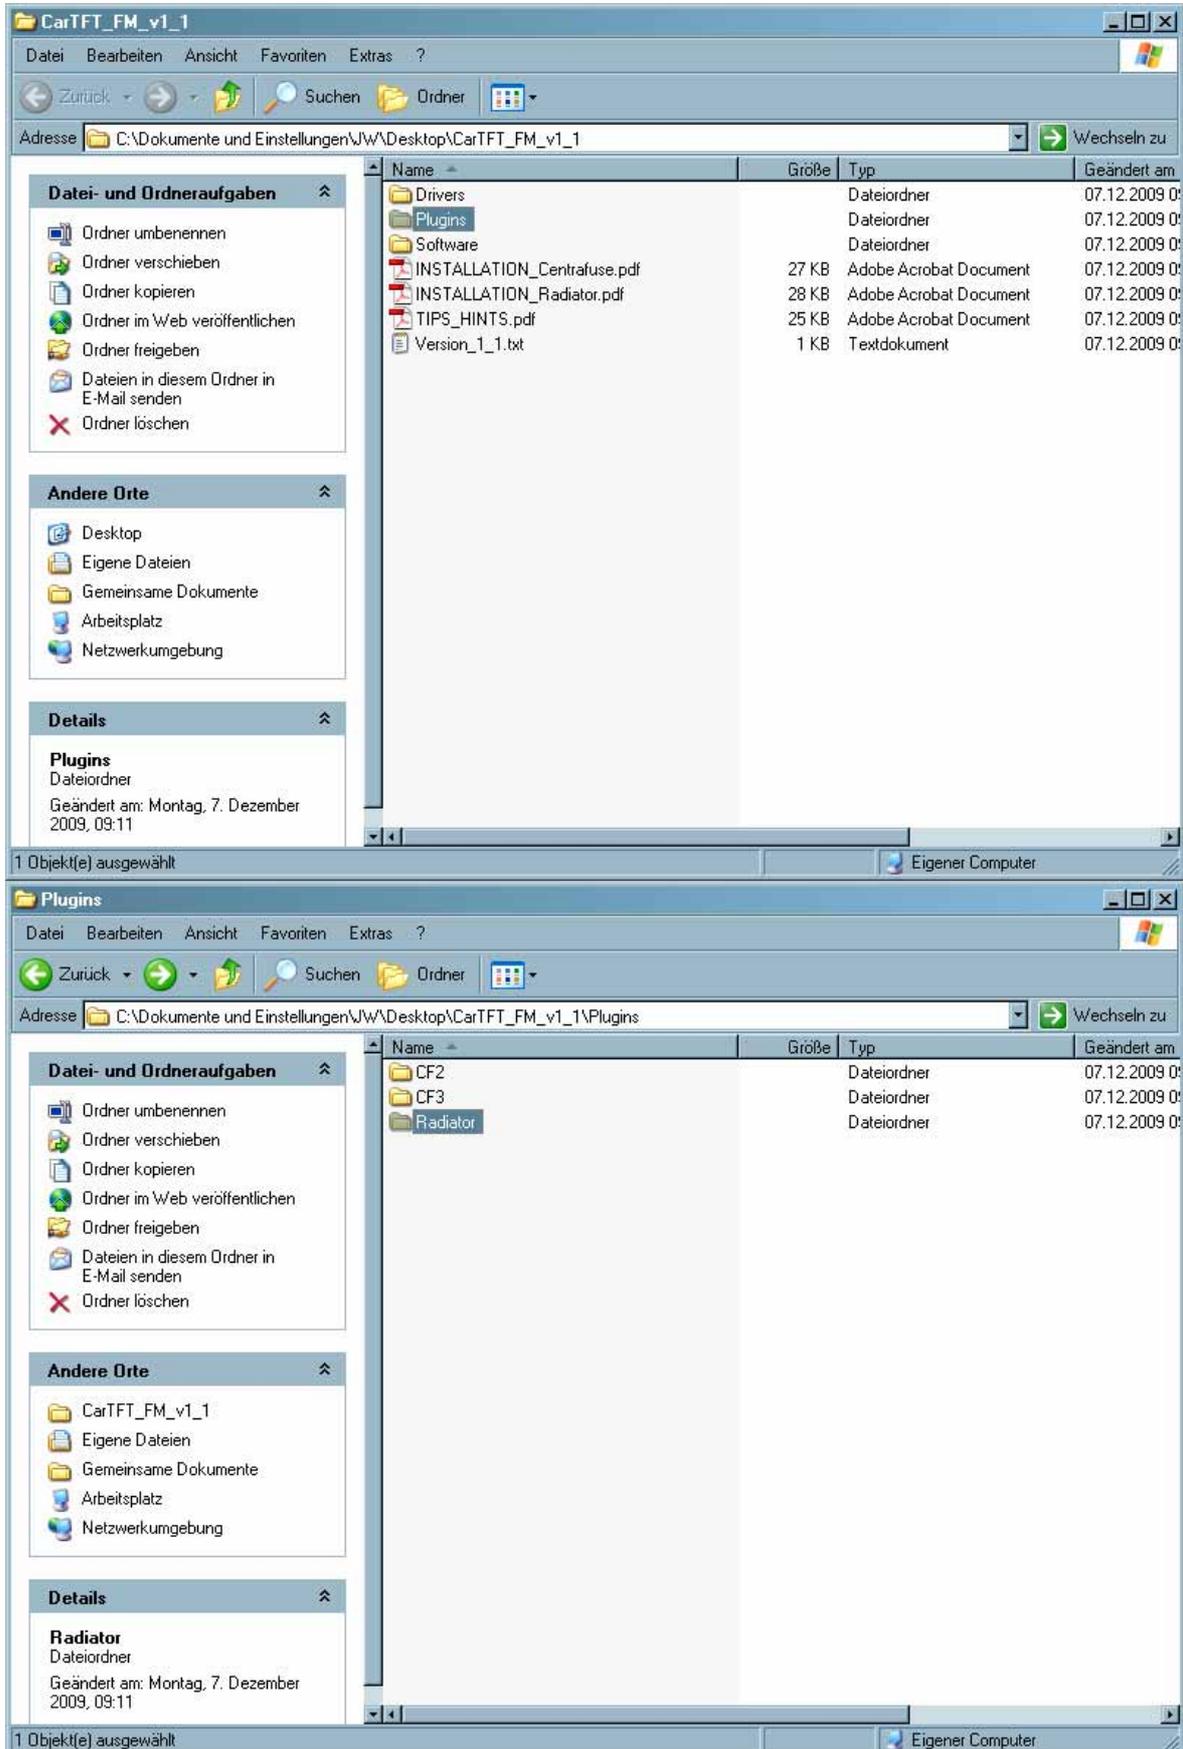



Copy the file „gpstmc.dll“ into the Radiator-Main-directory. (should be C:\Program files\Radiator)

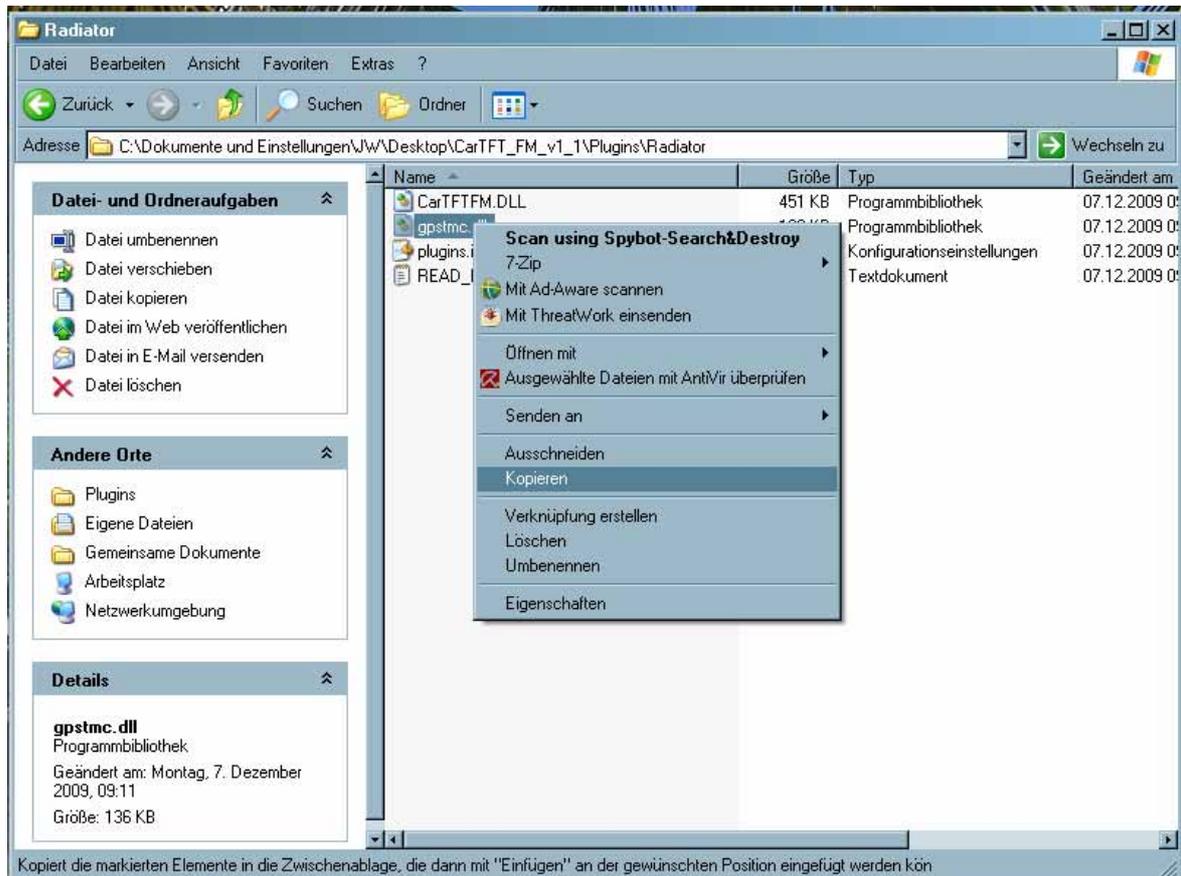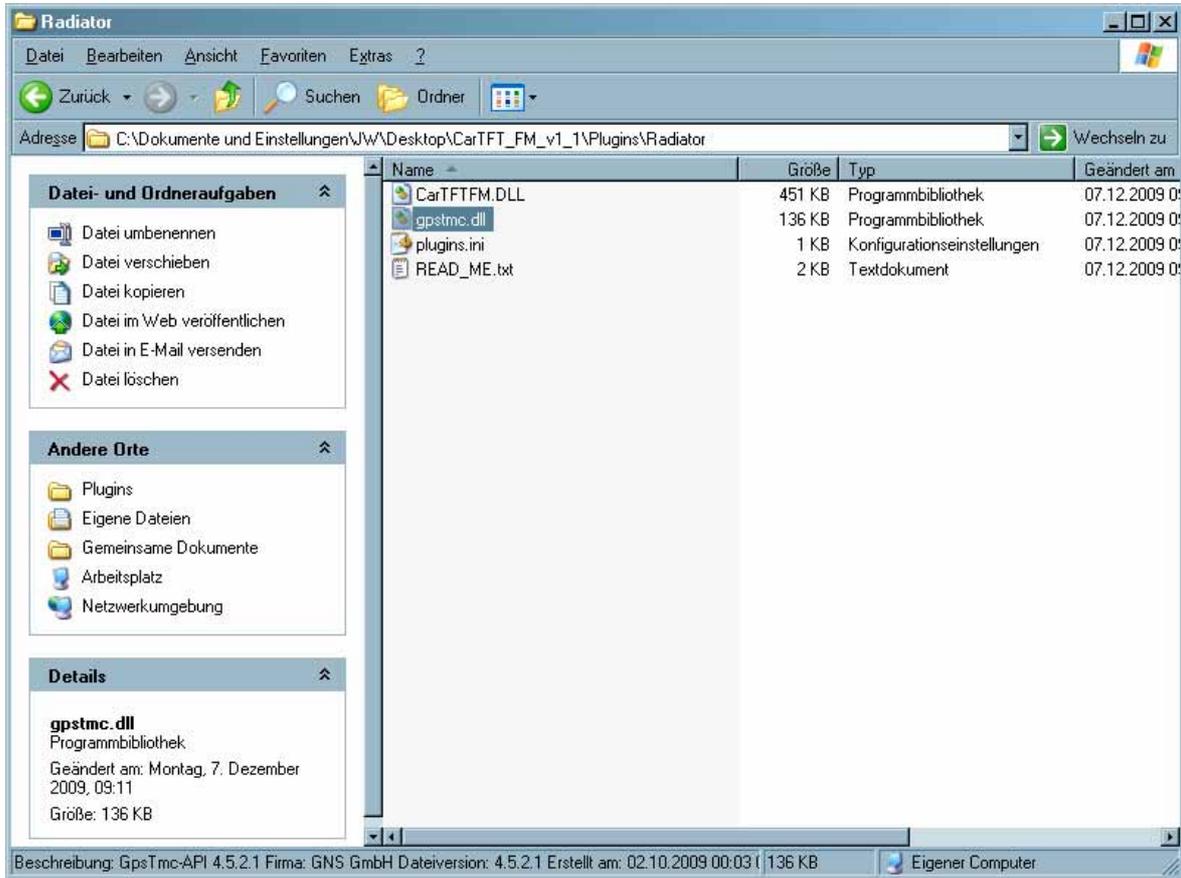



Arbeitsplatz

Adresse: Arbeitsplatz

Name	Typ	Gesamtgröße	Freier Speicher	Kommentare
Auf diesem Computer gespeicherte Dateien				
Gemeinsame Dokumente	Dateiordner			
Daten von RMA	Dateiordner			
Festplatten				
WIN XP (C:)	Lokaler Datenträger	74,5 GB	42,8 GB	
Geräte mit Wechselmedien				
Wechsell Datenträger (E:)	Wechsell Datenträger			
Wechsell Datenträger (F:)	Wechsell Datenträger			
Wechsell Datenträger (G:)	Wechsell Datenträger			
Wechsell Datenträger (H:)	Wechsell Datenträger			
Wechsell Datenträger (I:)	Wechsell Datenträger			
Wechsell Datenträger (J:)	Wechsell Datenträger			
Wechsell Datenträger (K:)	Wechsell Datenträger			
Wechsell Datenträger (L:)	Wechsell Datenträger			
Netzlaufwerke				
RT-Scan auf "dogobah server (Dagobah)" (Z:)	Nichtverbundenes Netzlauf...			
Andere				
Mobiles Gerät	Systemordner			

Freier Speicher: 42,8 GB Gesamtgröße: 74,5 GB

Eigener Computer



WIN XP (C:)

Adresse: C:\



Name	Größe	Typ	Geändert am	Bild anzeigen	Abmessungen
001a5b13405b222c90257272265		Dateiordner	01.02.2007 09:02		
d3a2bf1967633ed031d3a1		Dateiordner	06.02.2009 14:22		
Dokumente und Einstellungen		Dateiordner	13.05.2006 12:50		
flash		Dateiordner	22.08.2007 11:03		
Inaus.data		Dateiordner	15.01.2009 14:53		
MSOCache		Dateiordner	14.02.2006 13:36		
photoshop5		Dateiordner	19.01.2007 11:46		
Programme		Dateiordner	09.12.2009 09:41		
Stunnel		Dateiordner	30.10.2006 17:40		
TempE14		Dateiordner	03.01.2008 14:12		
Weltrend		Dateiordner	21.08.2007 15:41		
WINDOWS		Dateiordner	09.12.2009 08:50		
aaw7boot.log	50 KB	Textdokument	09.12.2009 07:33		
Stunnel.zip	1.251 KB	ZIP-komprimierter Ordner	30.10.2006 17:39		
Insipm.log	19 KB	Textdokument	11.02.2009 14:54		
ver.txt	1 KB	Textdokument	21.04.2008 09:56		



1 Objekt(e) ausgewählt


Eigener Computer

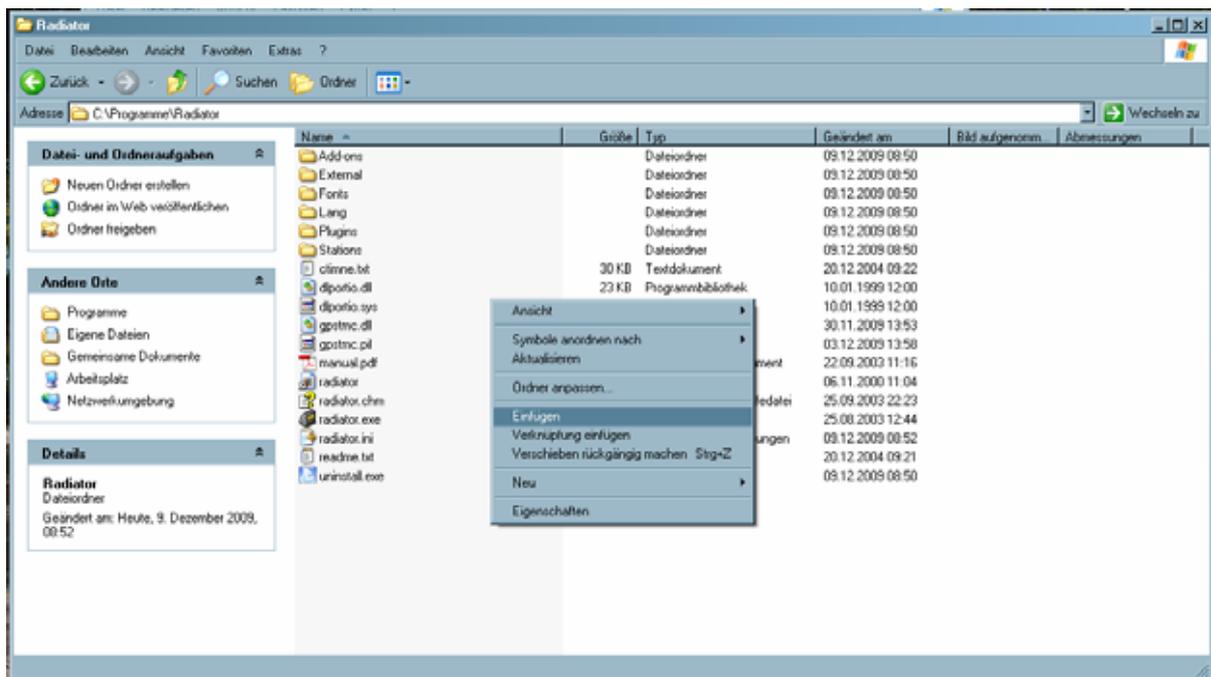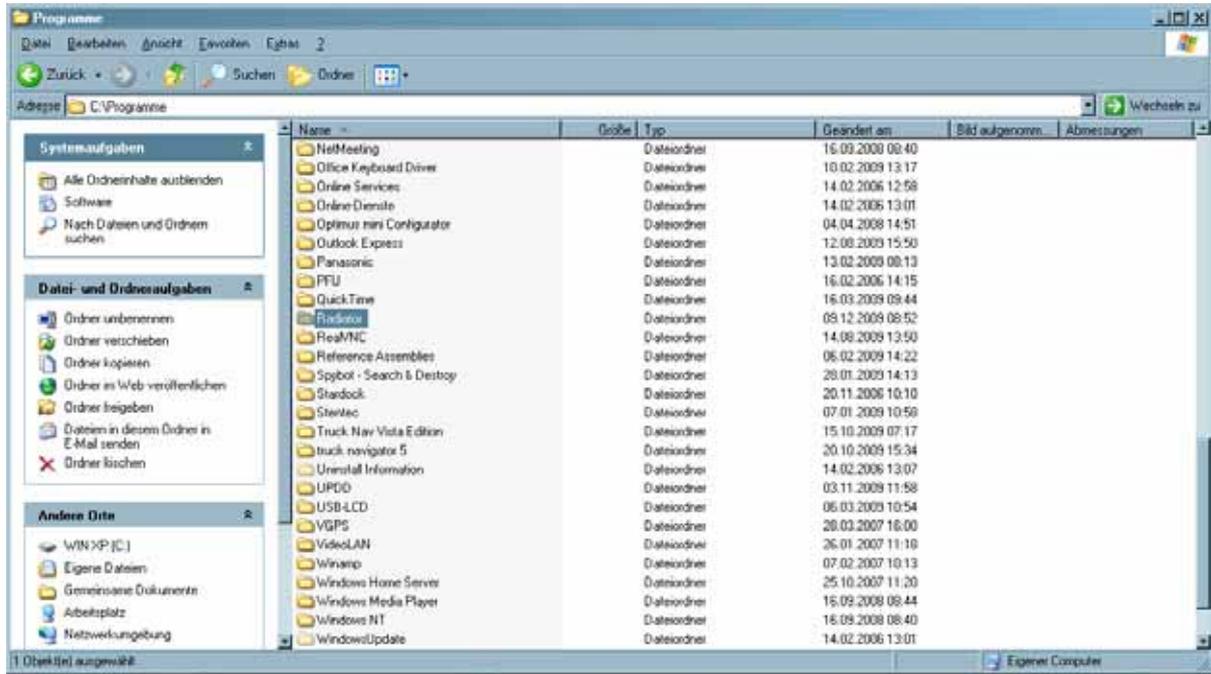


Now copy the files „CarTFTFM.dll“ and „plugins.ini“ into Plugins subdirectory of your Radiator installation.
(usually C:\Program files\Radiator\Plugins)

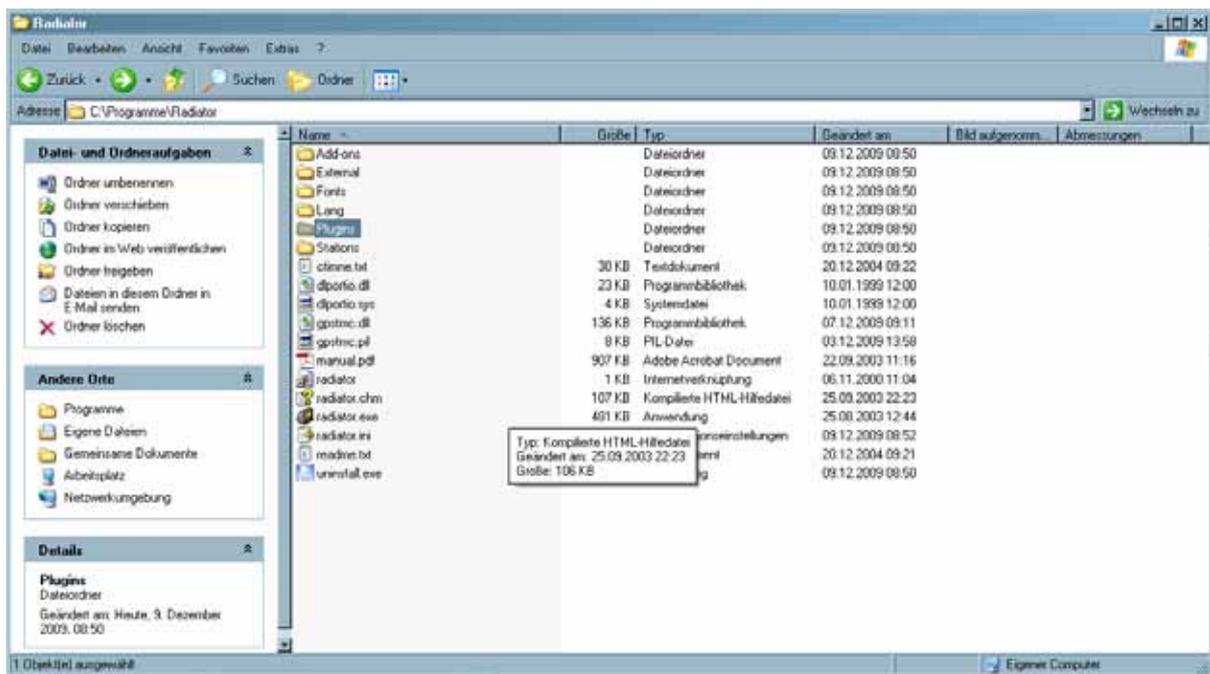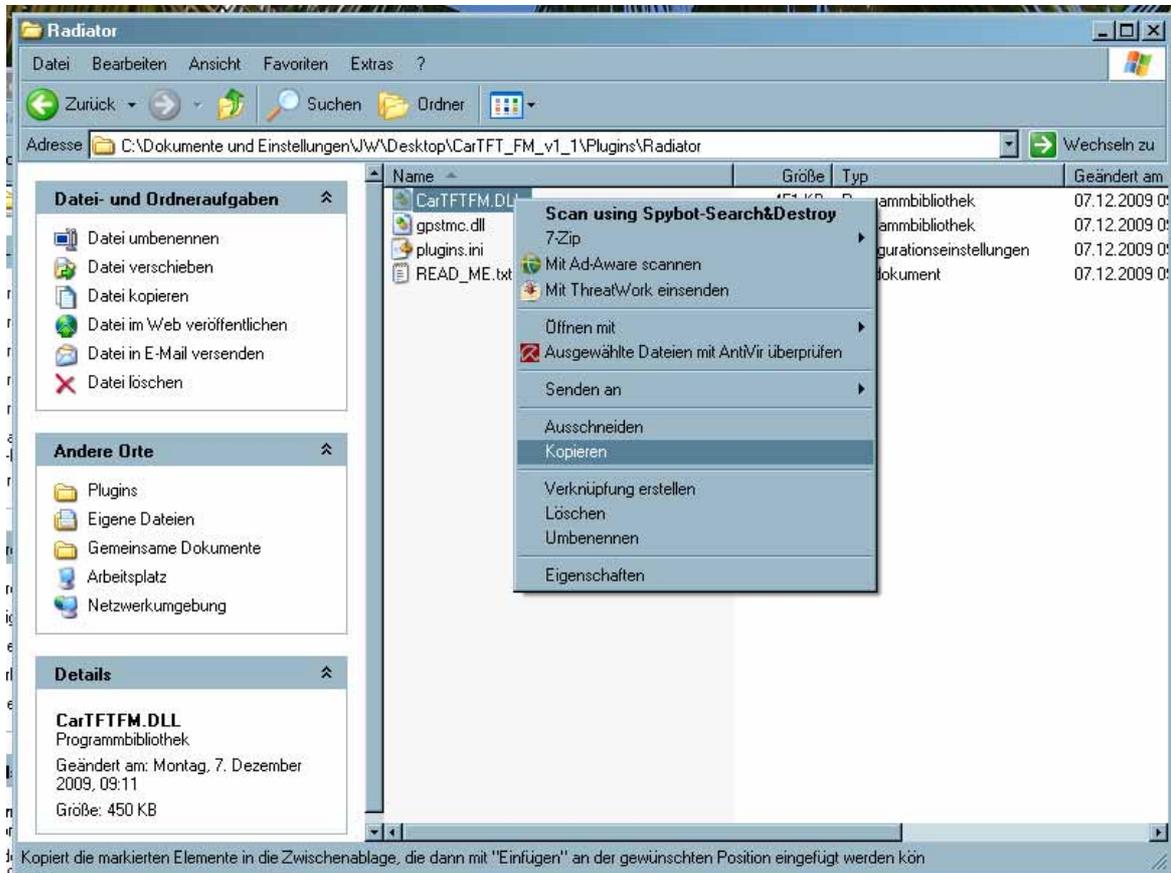

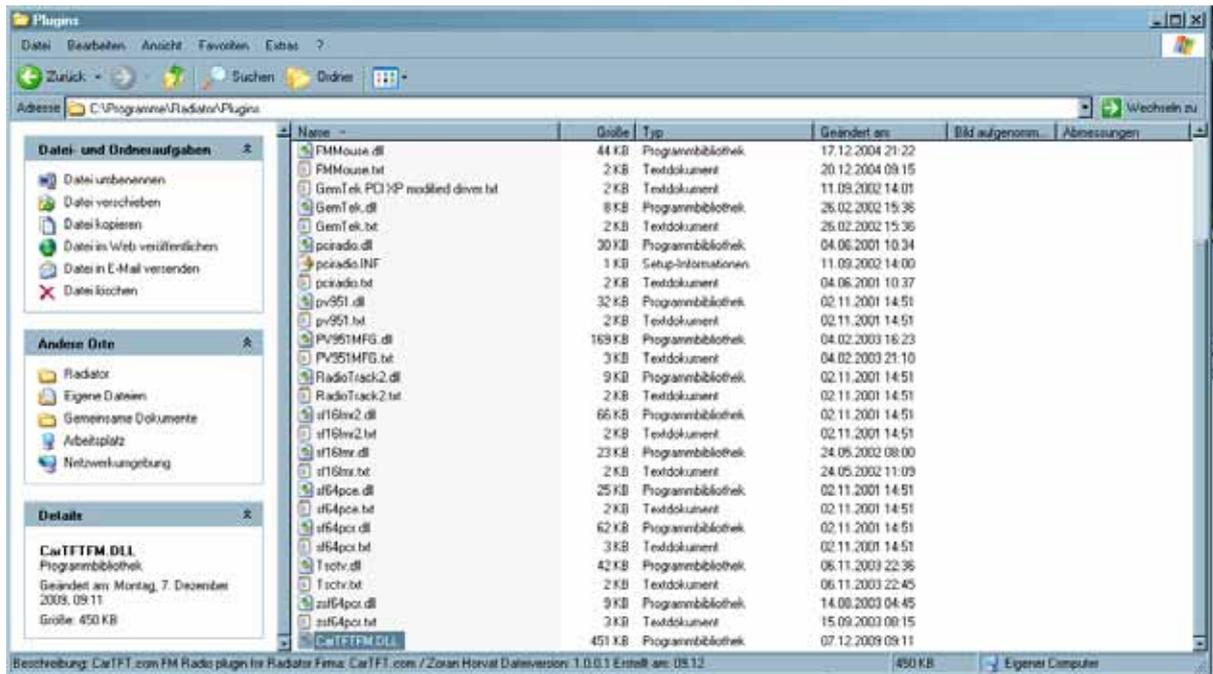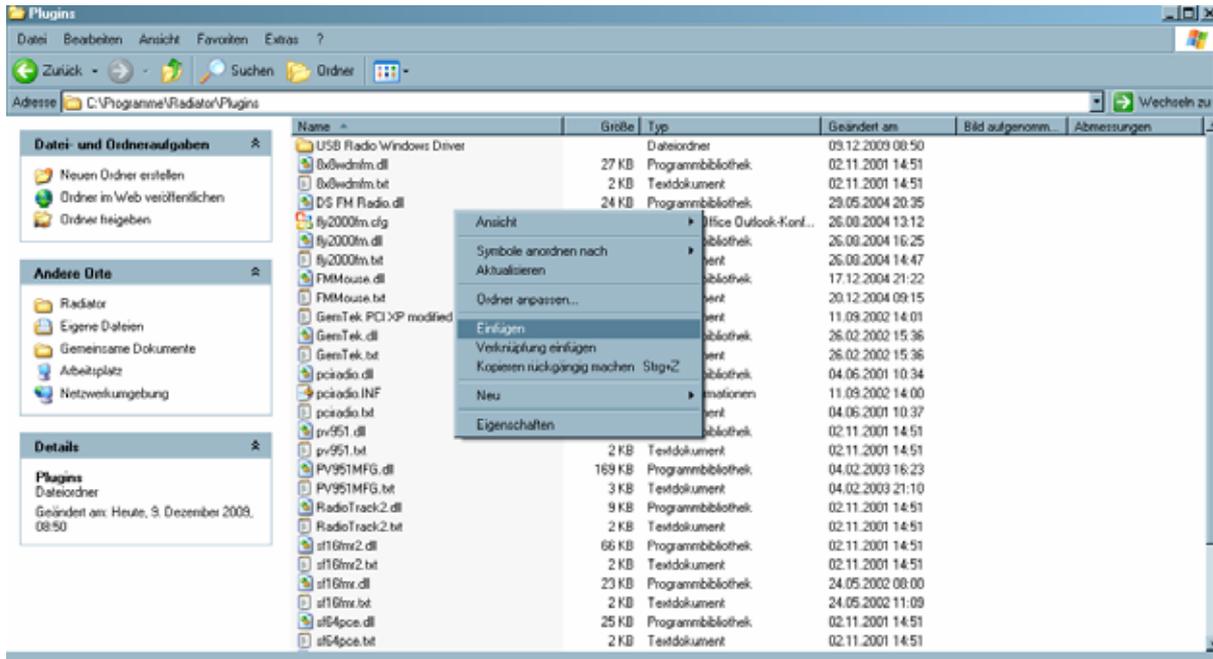


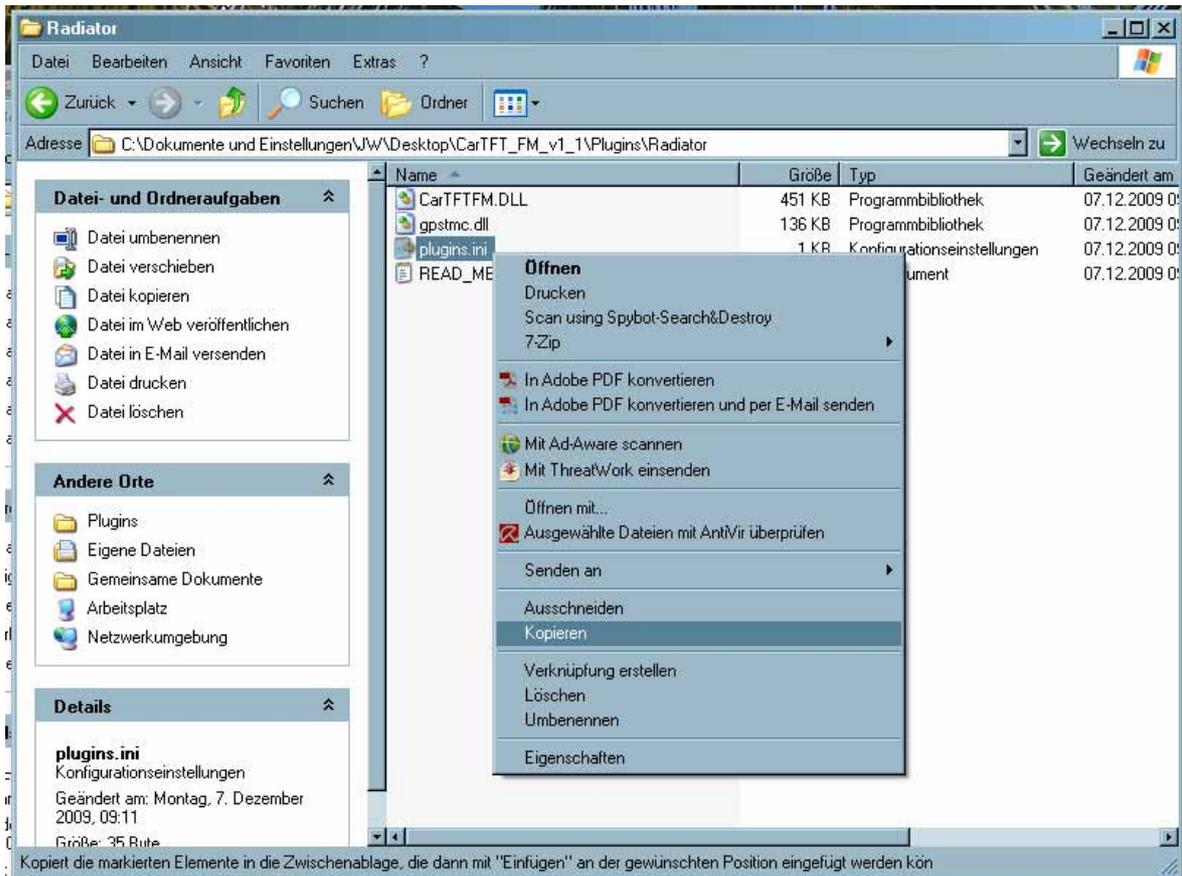

Kopiert die markierten Elemente in die Zwischenablage, die dann mit "Einfügen" an der gewünschten Position eingefügt werden können

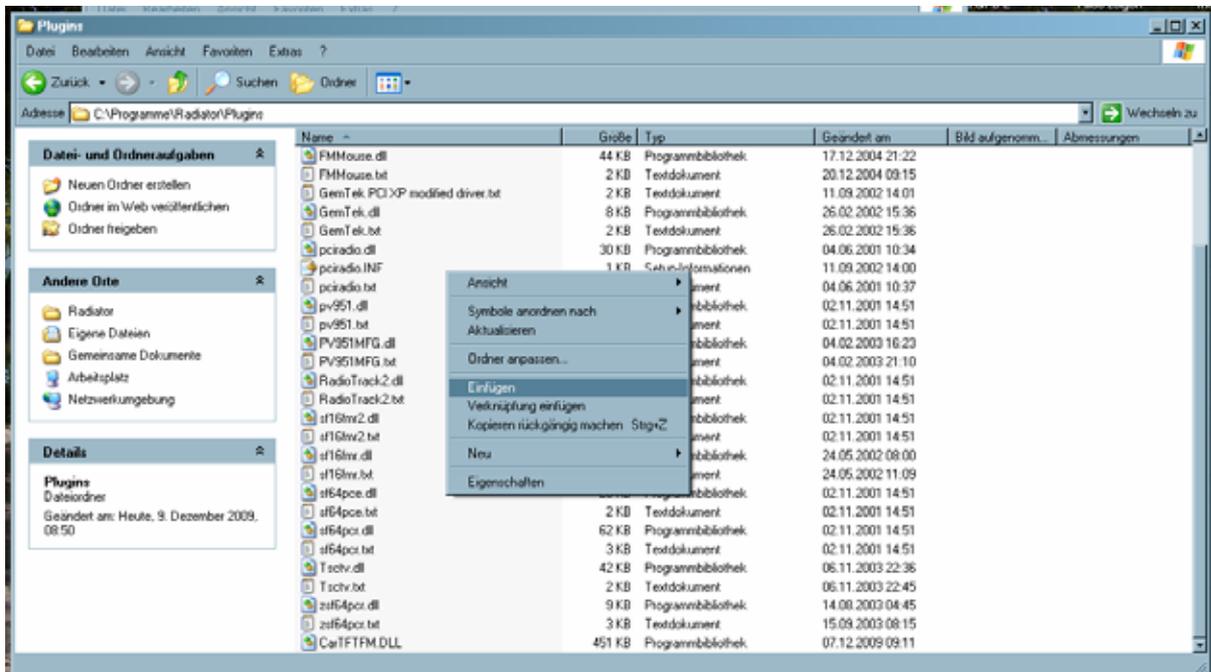


Open „C:\Program files\Radiator\Plugins\plugins.ini“ with a text editor (eg. Notepad) and set the COM port of your device.

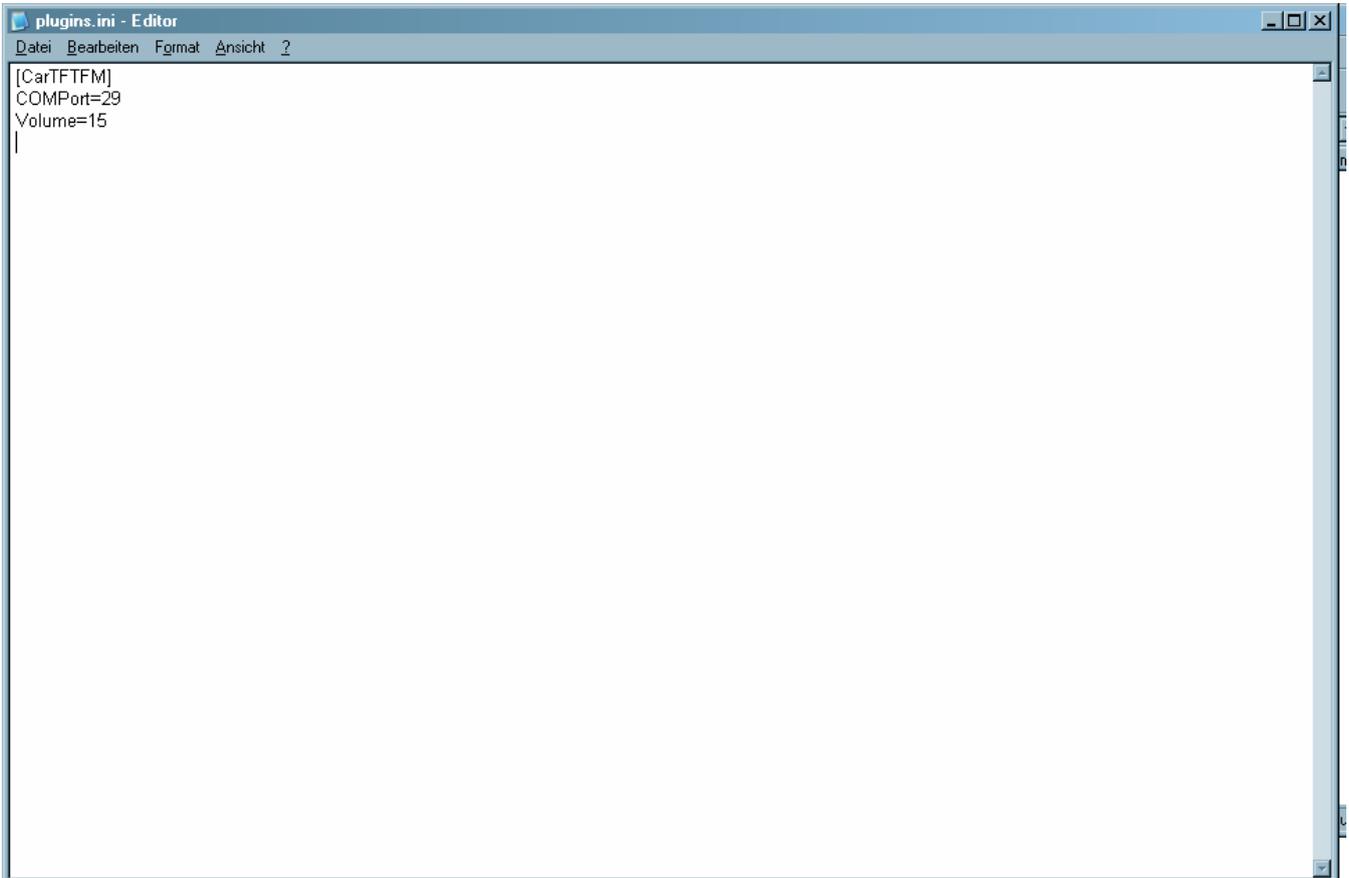


A screenshot of a Notepad window titled "plugins.ini - Editor". The window has a menu bar with "Datei", "Bearbeiten", "Format", and "Ansicht ?". The text content is as follows:

```
[CarTFTFM]
COMPort=29
Volume=15
|
```

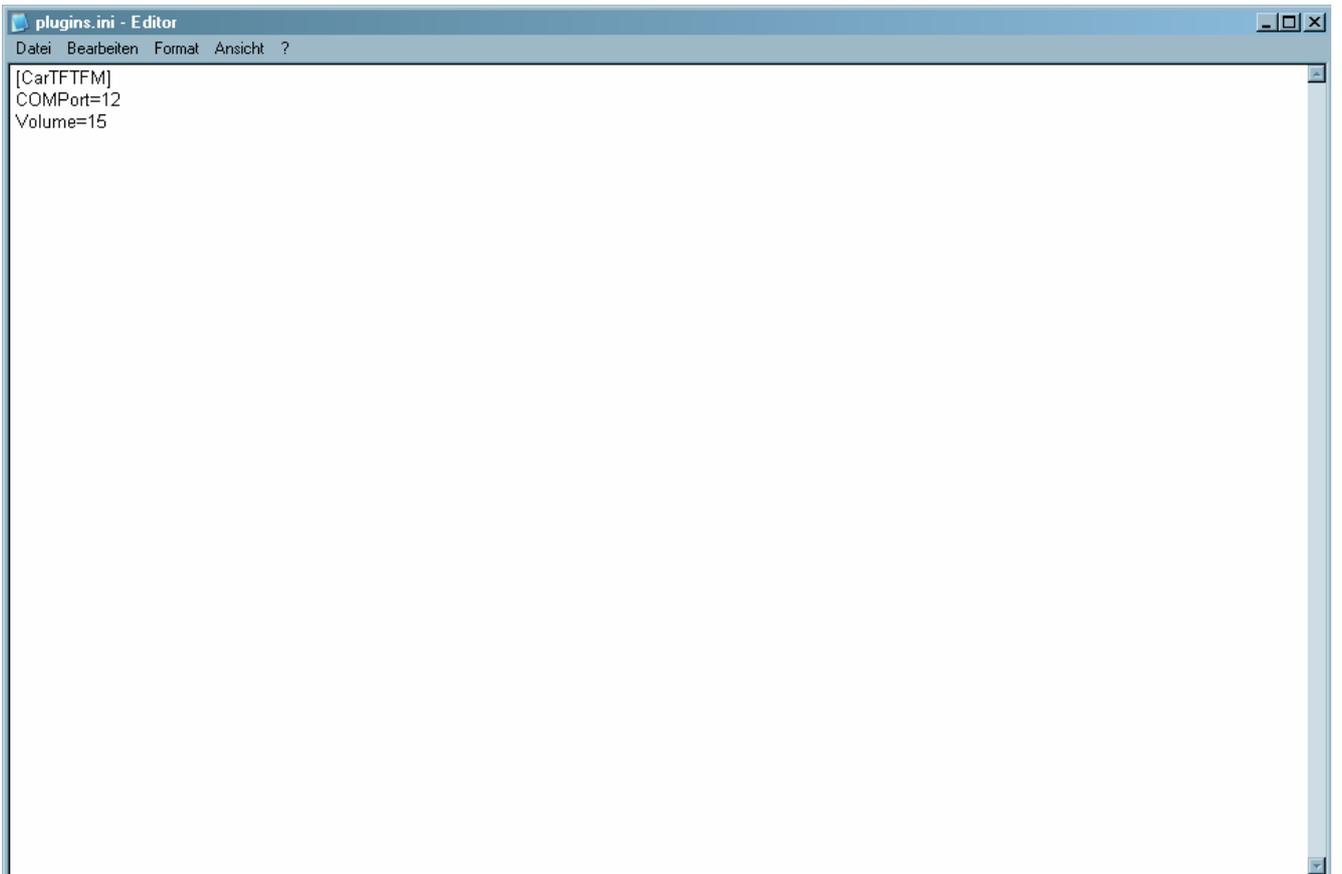

A screenshot of a Notepad window titled "plugins.ini - Editor". The window has a menu bar with "Datei", "Bearbeiten", "Format", and "Ansicht ?". The text content is as follows:

```
[CarTFTFM]
COMPort=12
Volume=15
```

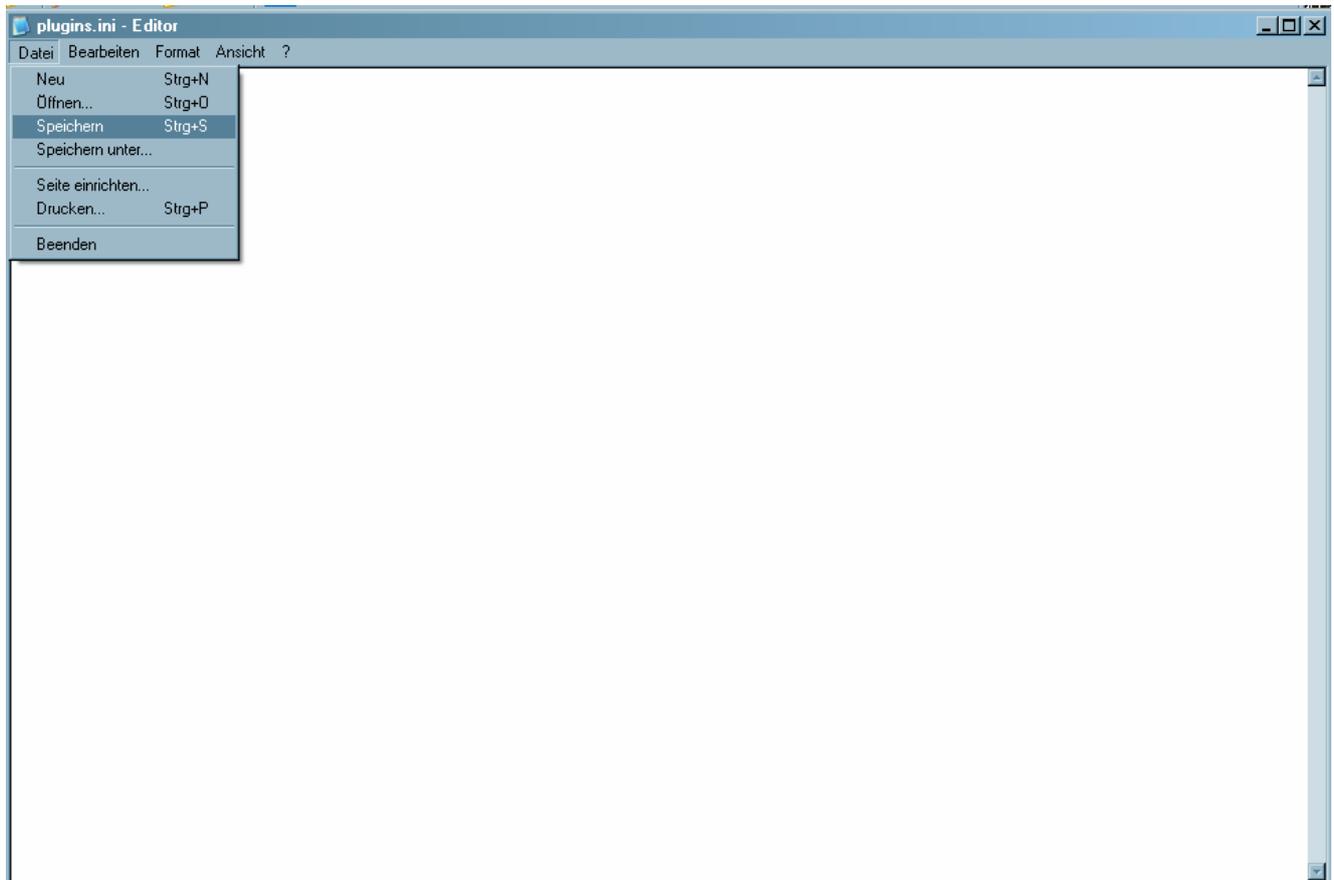


There is a shortcut to Radiator on your desktop :




Open it with right mouse click and go to „properties“ tab.



In „shortcuts“ you need to set the program path in the „run in“ field :


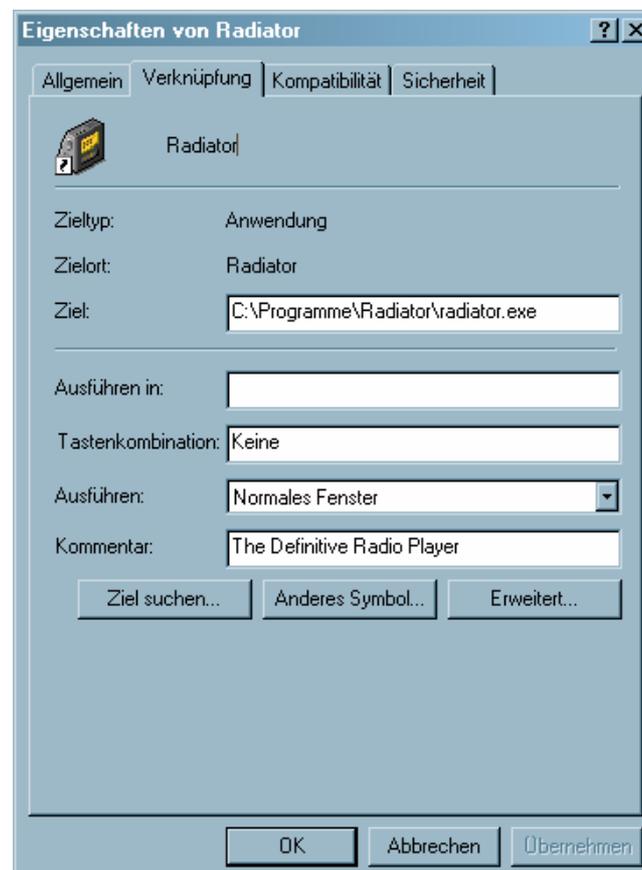


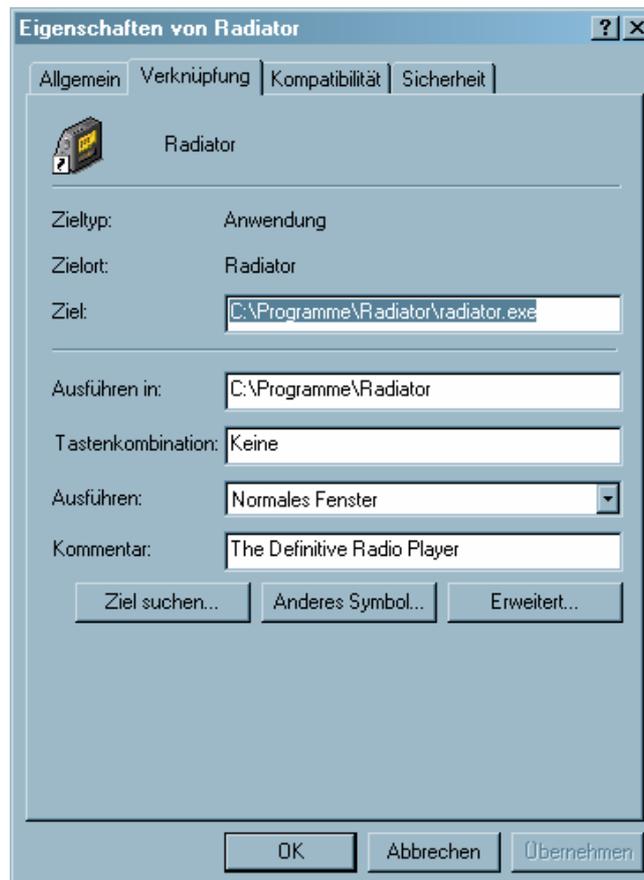




Now start Radiator and go to setup menu.




Click on „Hardware“ and set the mark on „External DLL driver“.
There you can choose the module „CarTFT FM“.

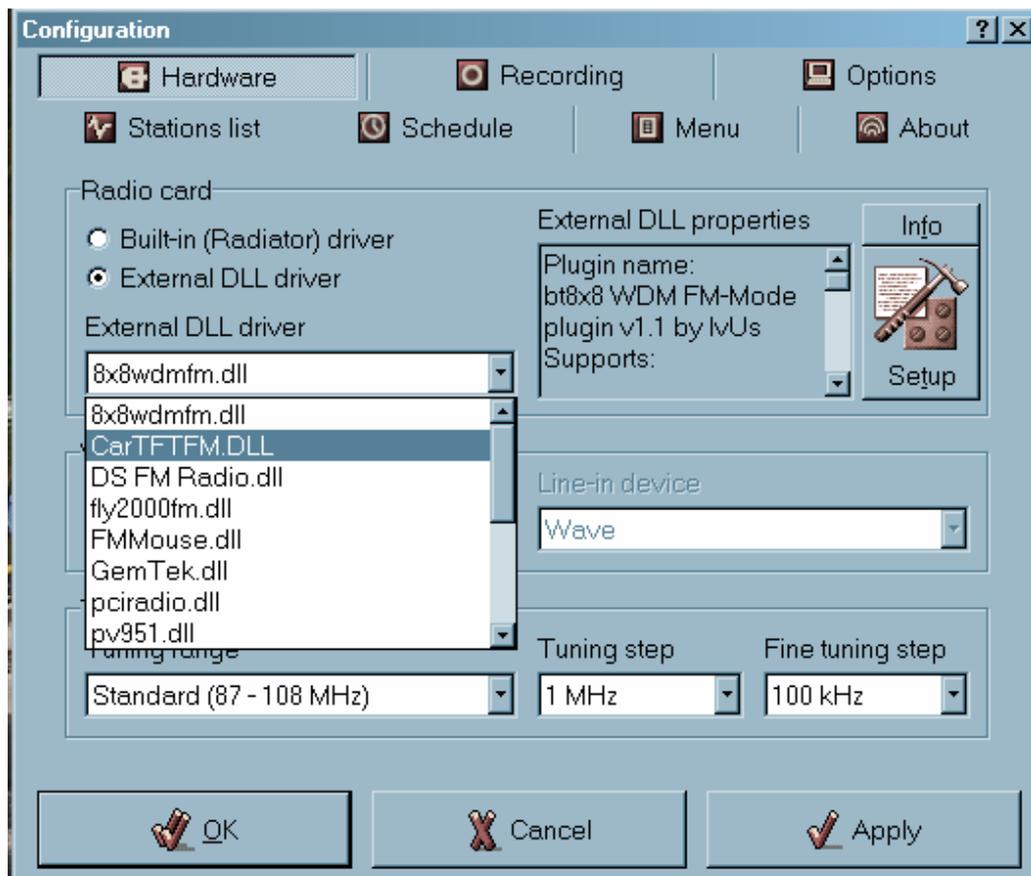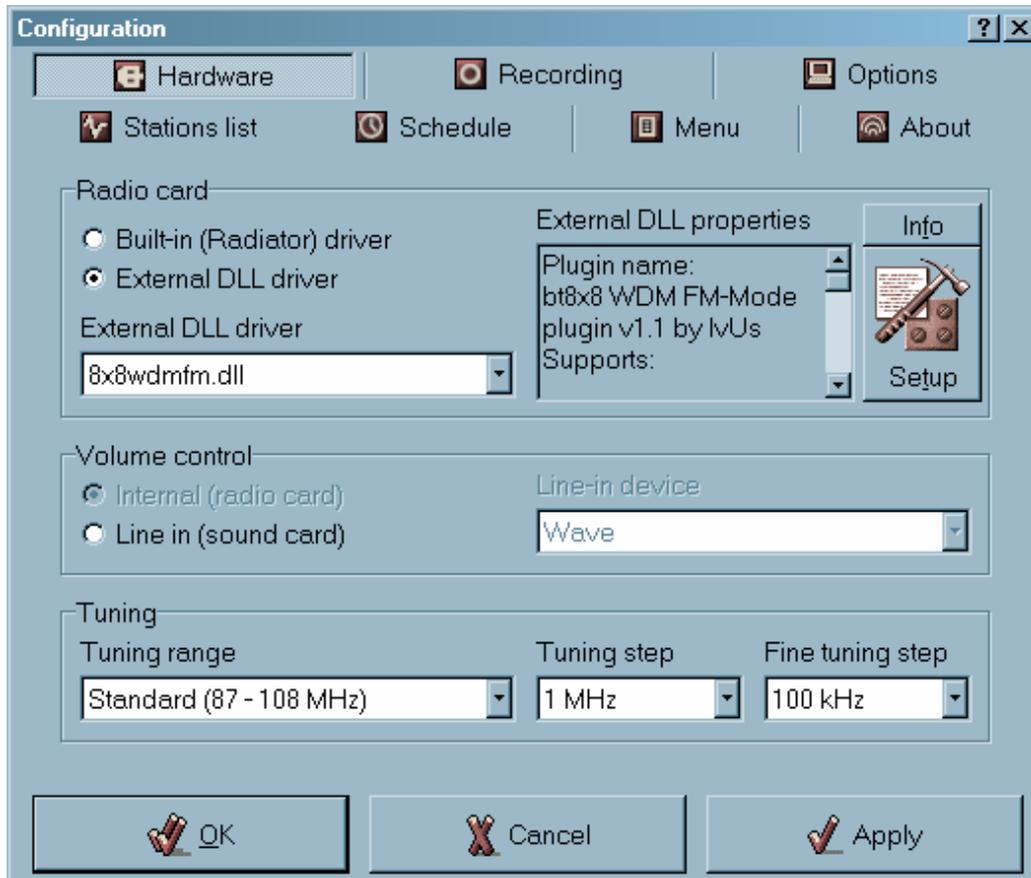


If you click on „Setup“-Button you can configure the COM port again if you want.

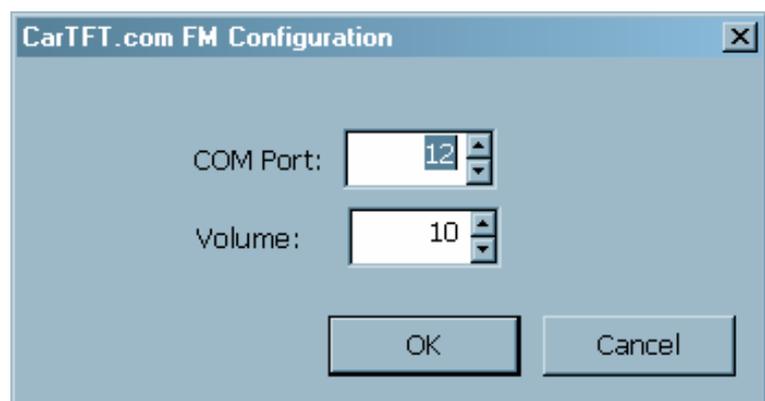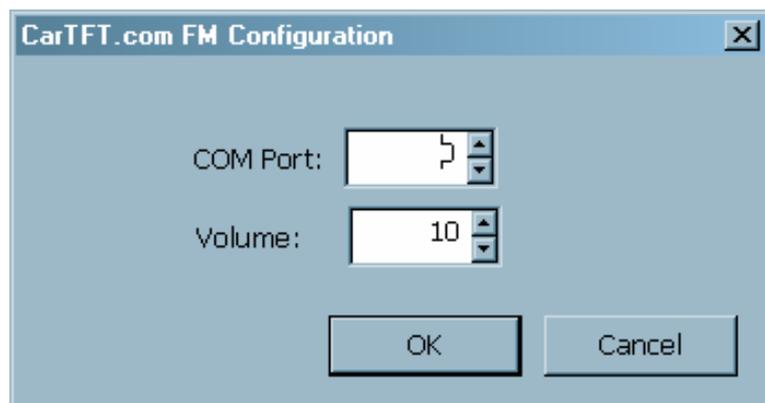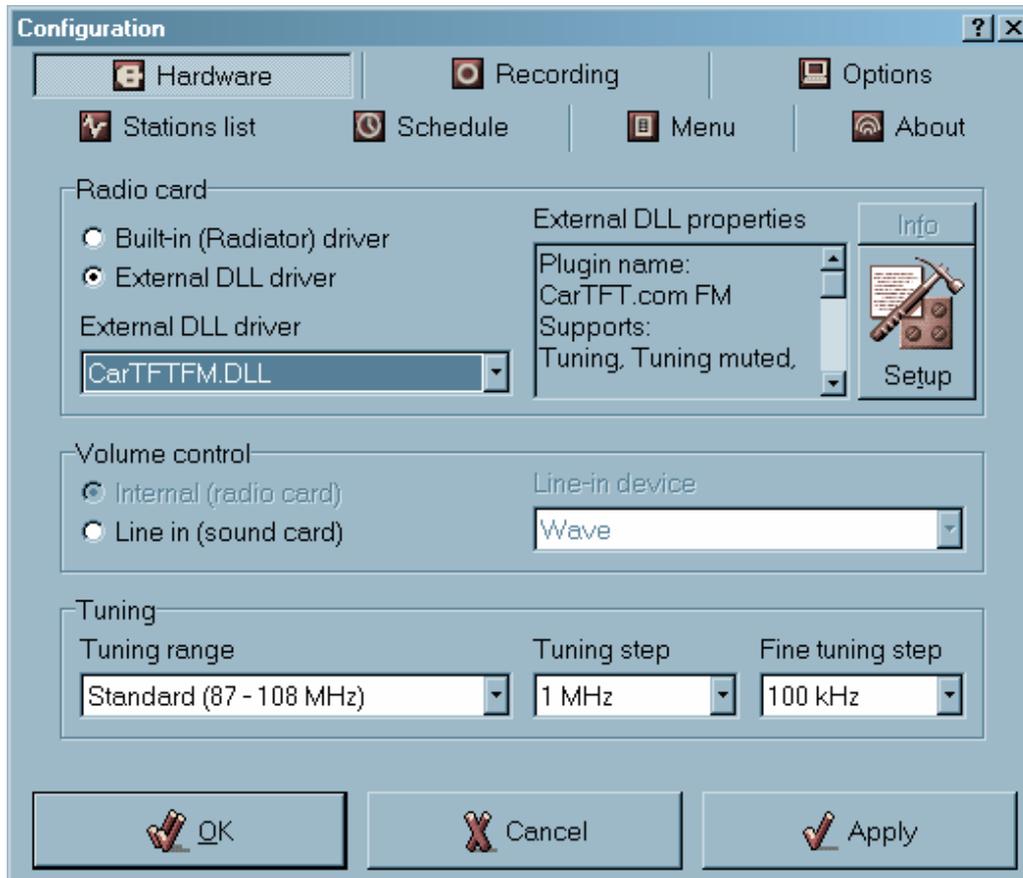


Now go to „Options“ tab

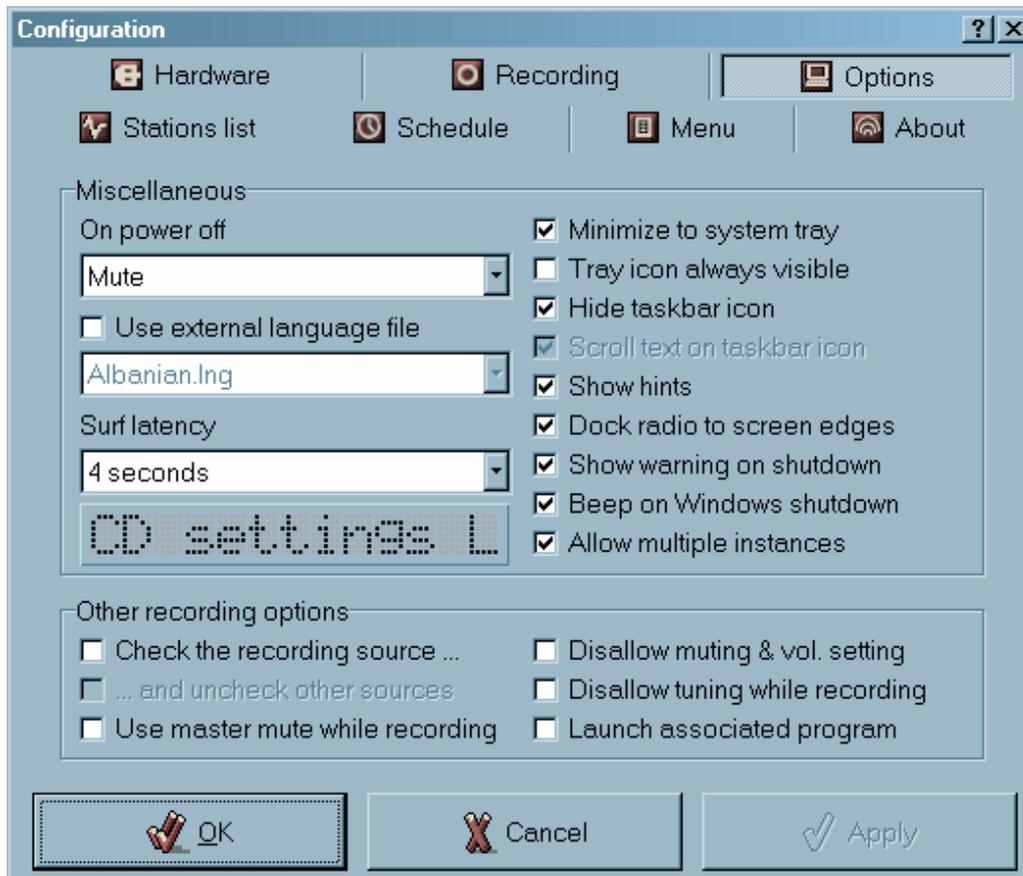


Here you can set your desired language.

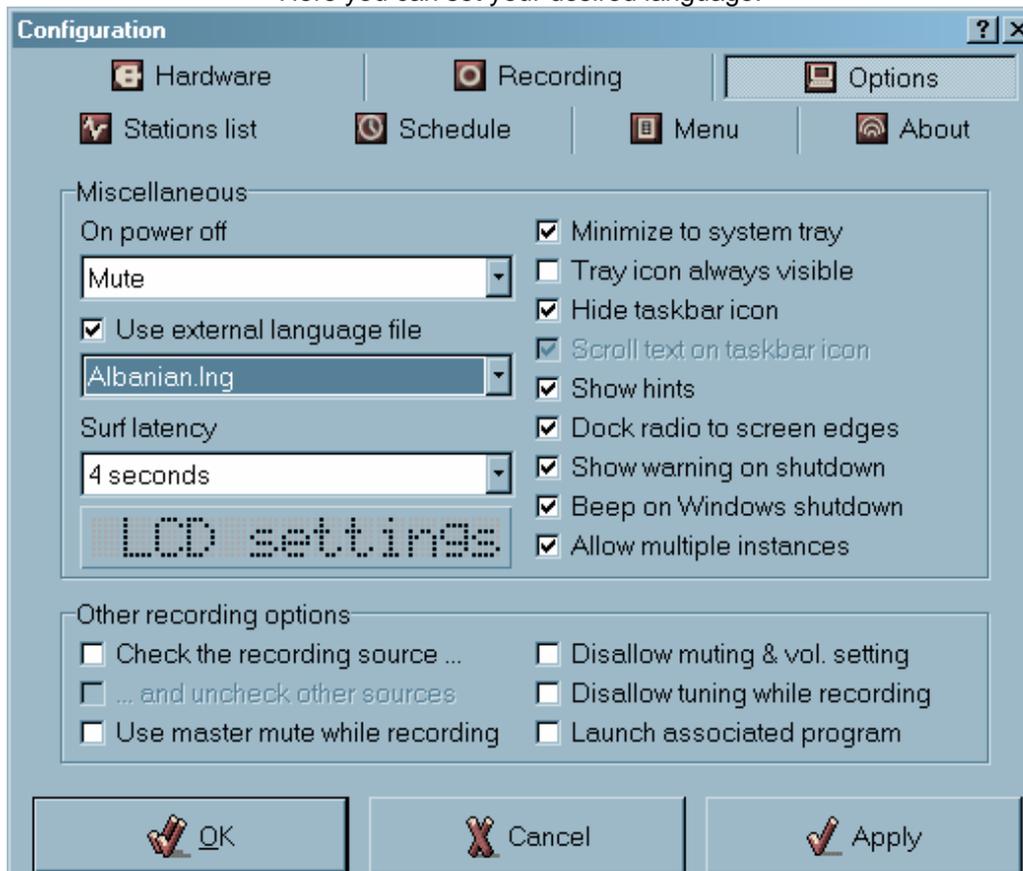

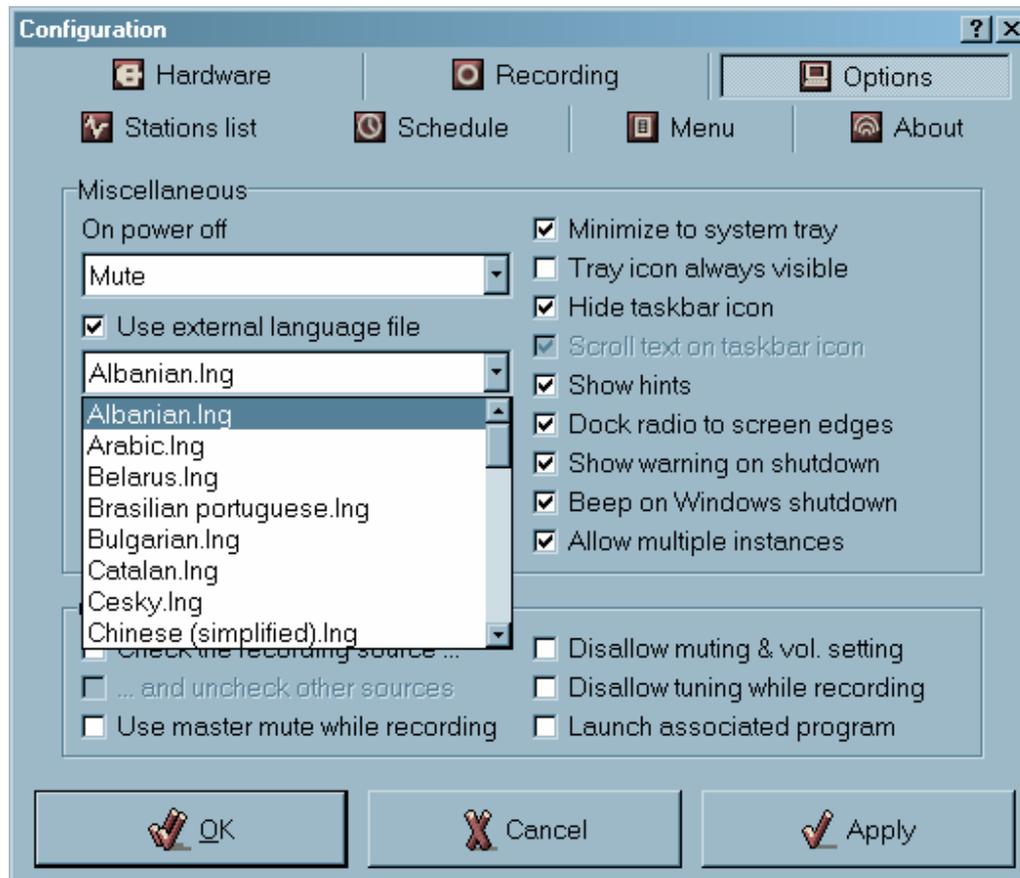

Confirm with „Apply“ or „Ok“ when all is done.

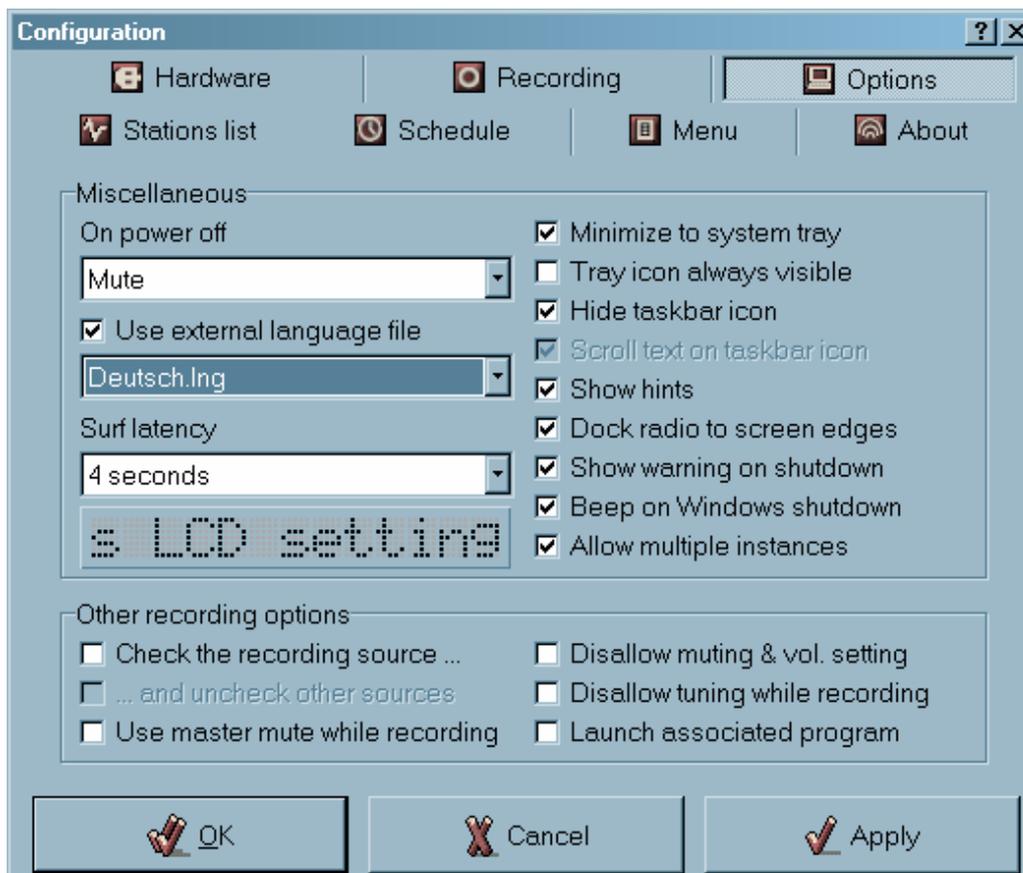




CARTFT.COM

Shop for mobile
PC- and GPS-Solutions

Power Up Your Car

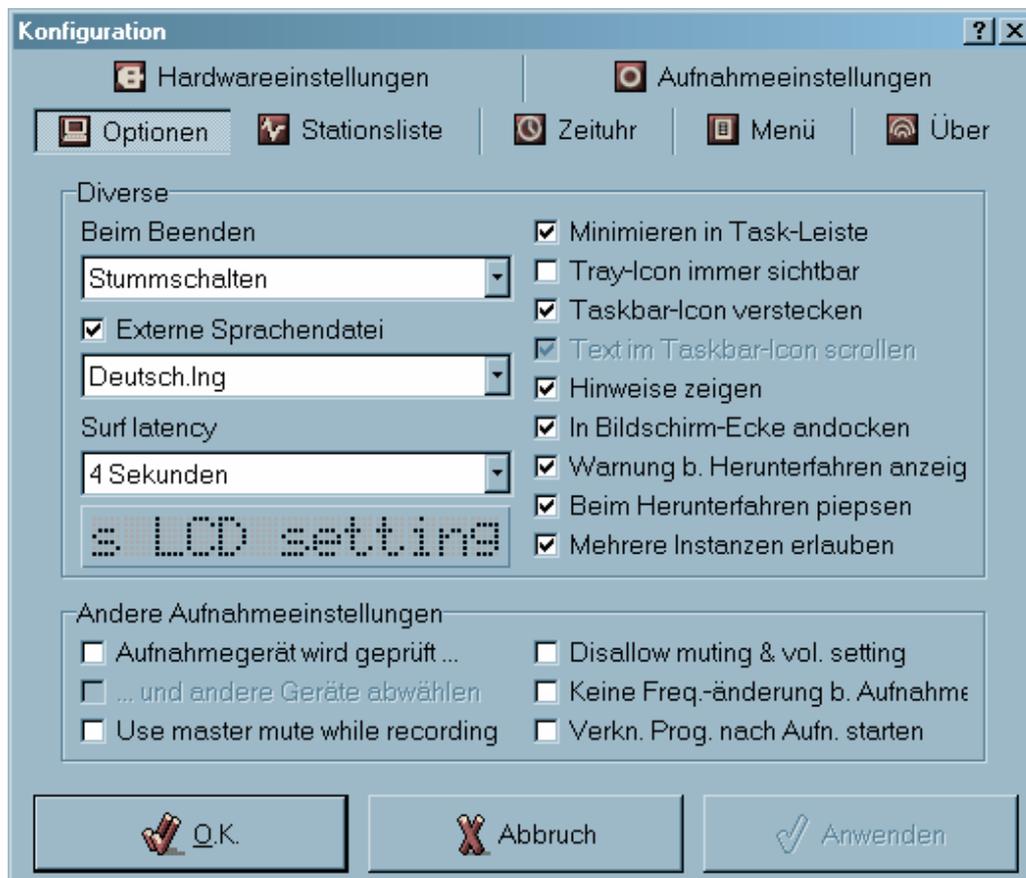

Go back to „Hardware“ and set your Line-In device (where the radio is connected to).

